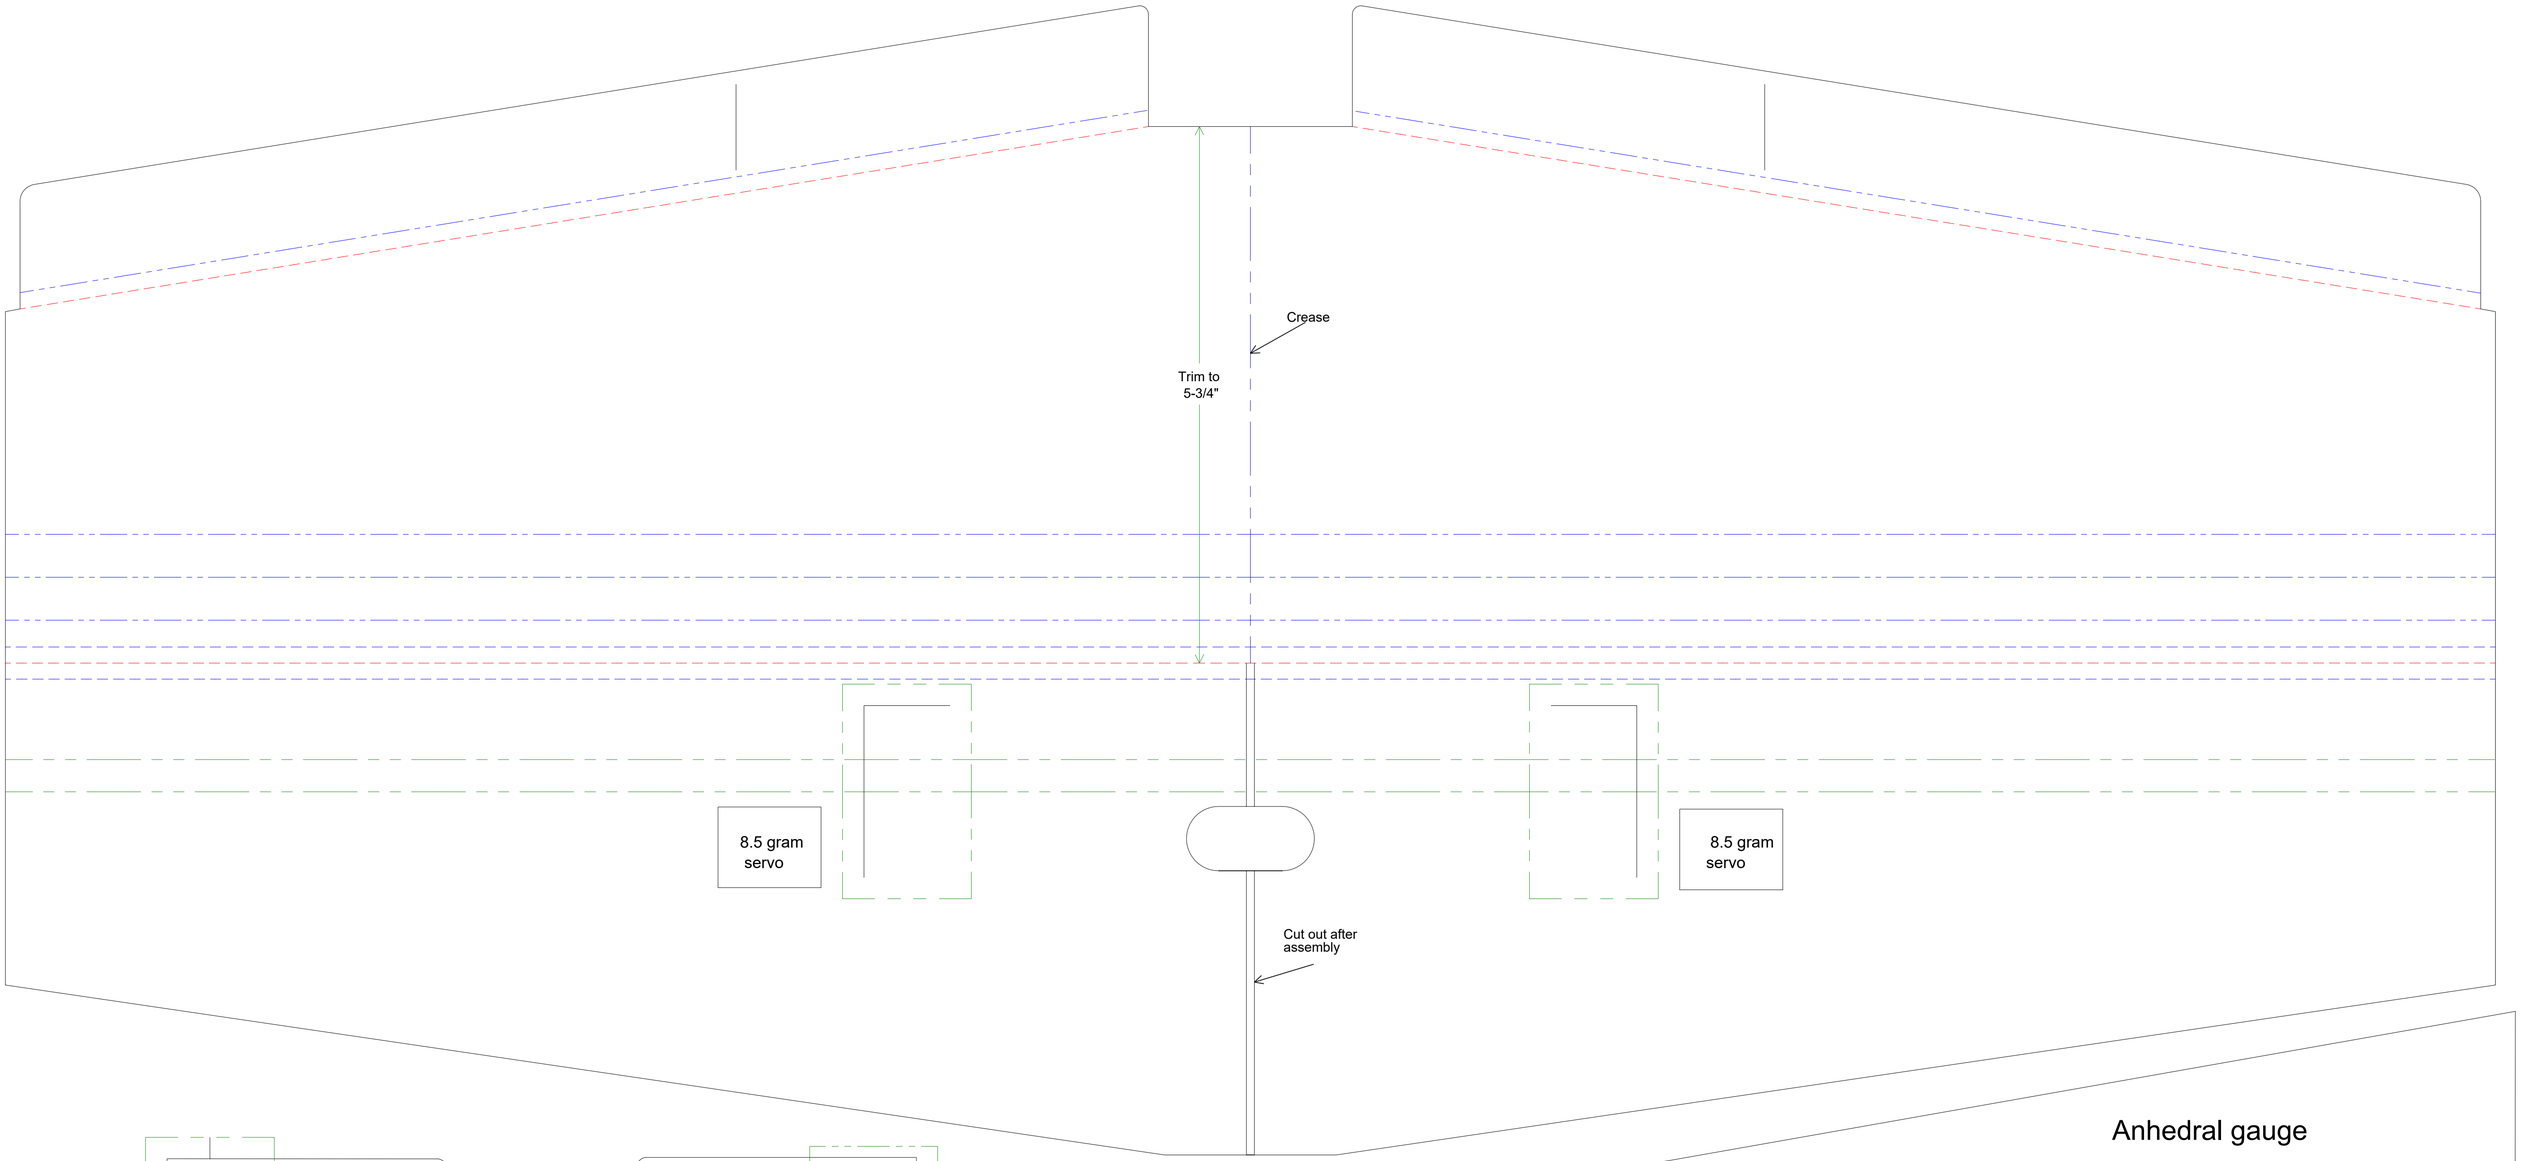

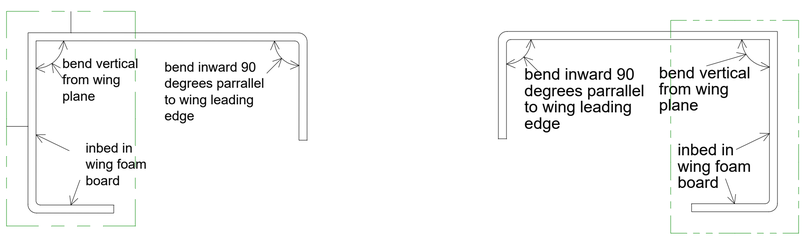

Anhedral gauge

Set left/right wing on work bench & insert gauge under wing, make sure gauge tip is at wing center line

1/8" Lite Ply
Landing gear block

X2

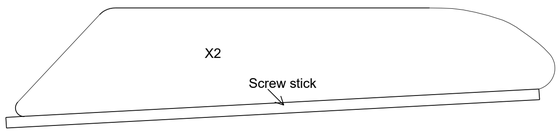



SCOOTER
Wing

3/31/2018

Version 1.0