


Set compass to 7/8"

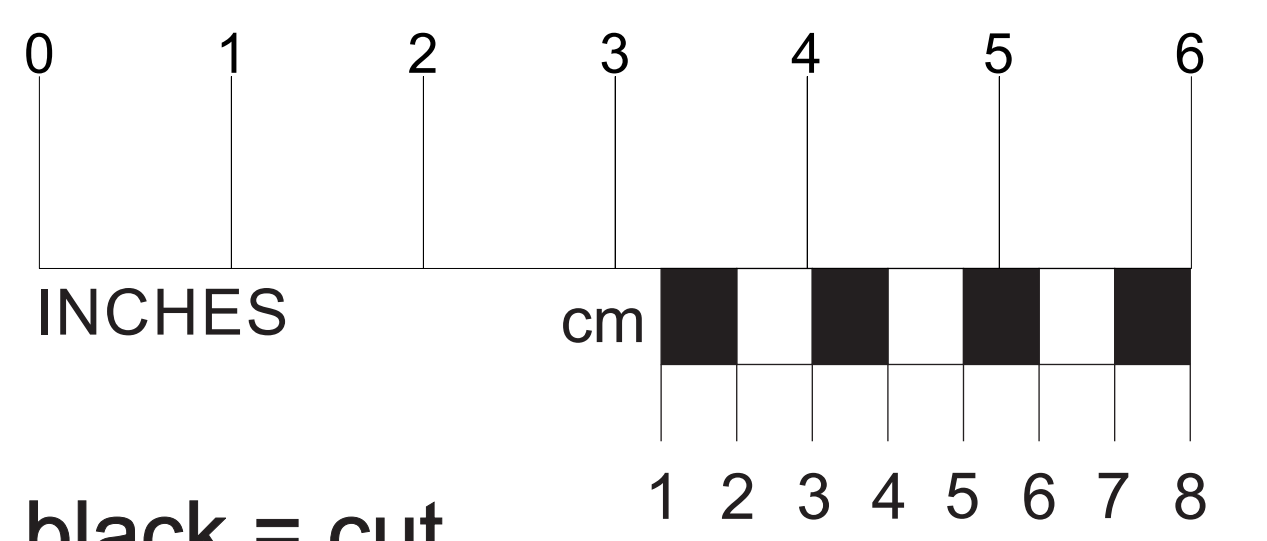

black = cut  
 red = score 50%  
 navy blue = lightly crease

TO CREATE RIGHT WING. FLIP PLANS OVER AND REMOVE DASHED SPAR SLOT INSTEAD OF SOLID ONE (ATTENTION LEFT)

REMOVE ONLY THIS SPAR SLOT FOR RIGHT WING.

28"