

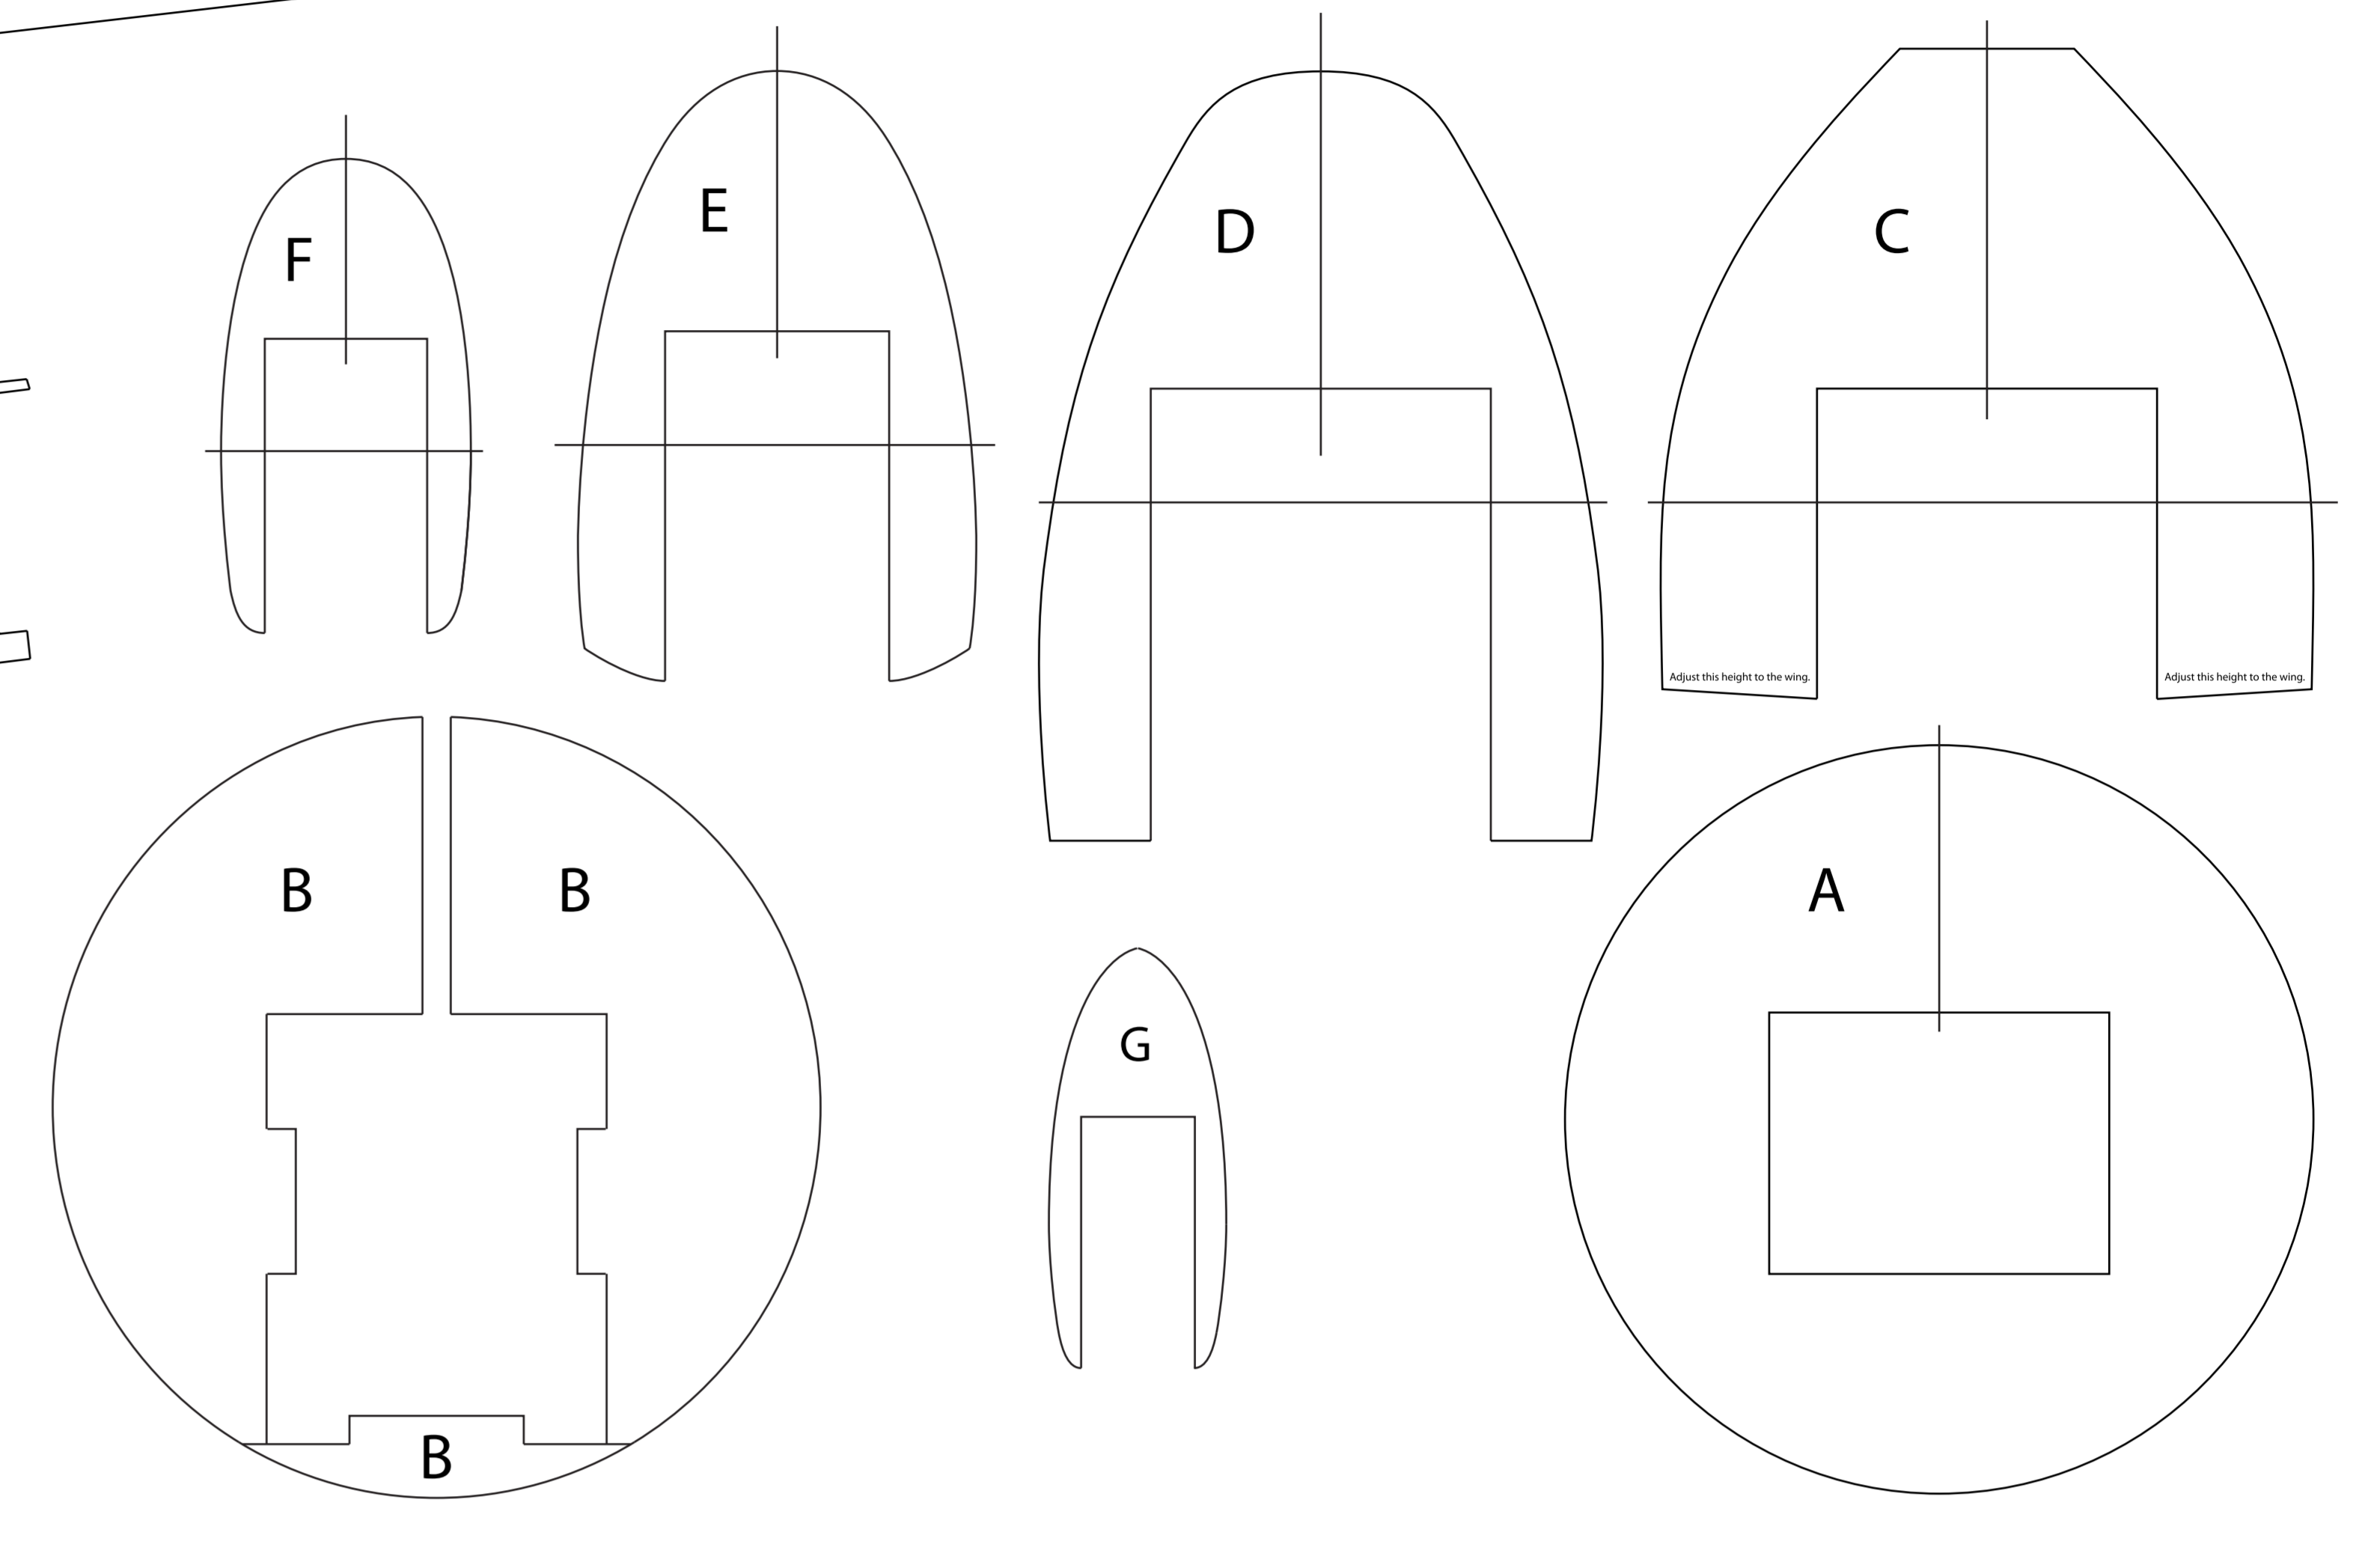
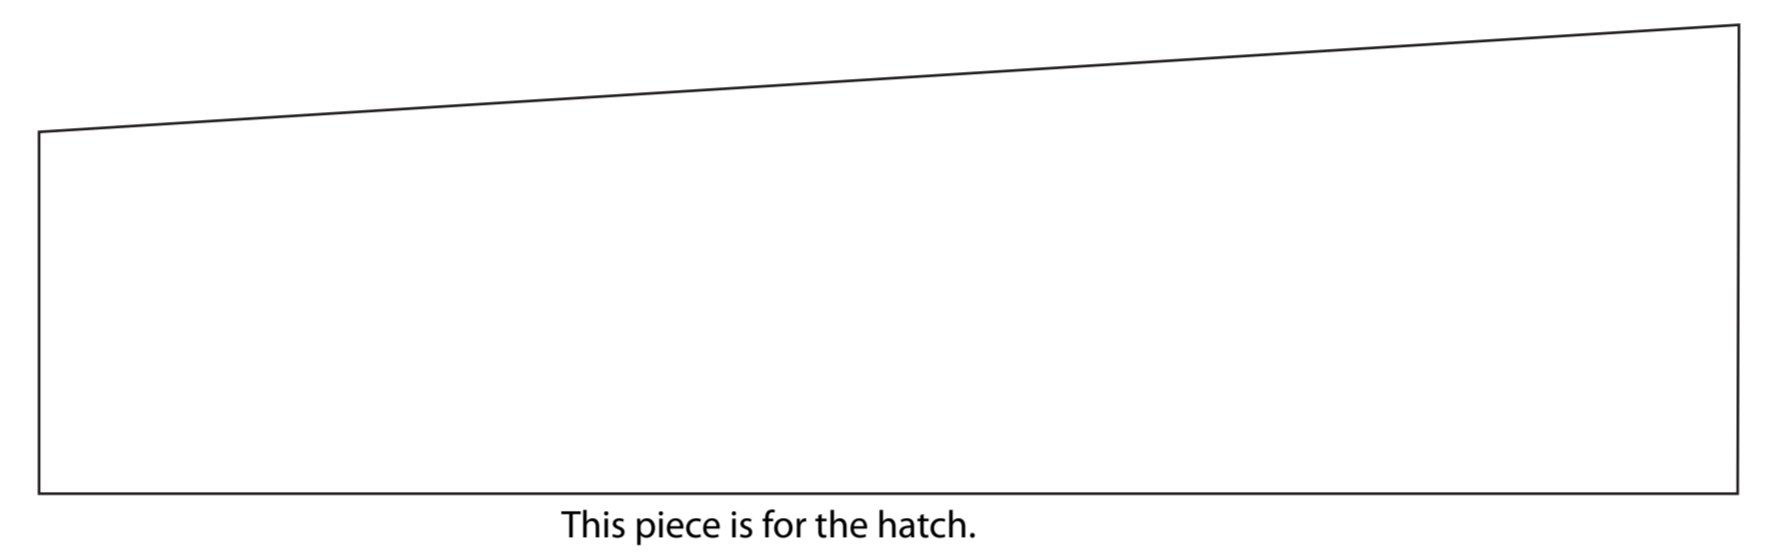
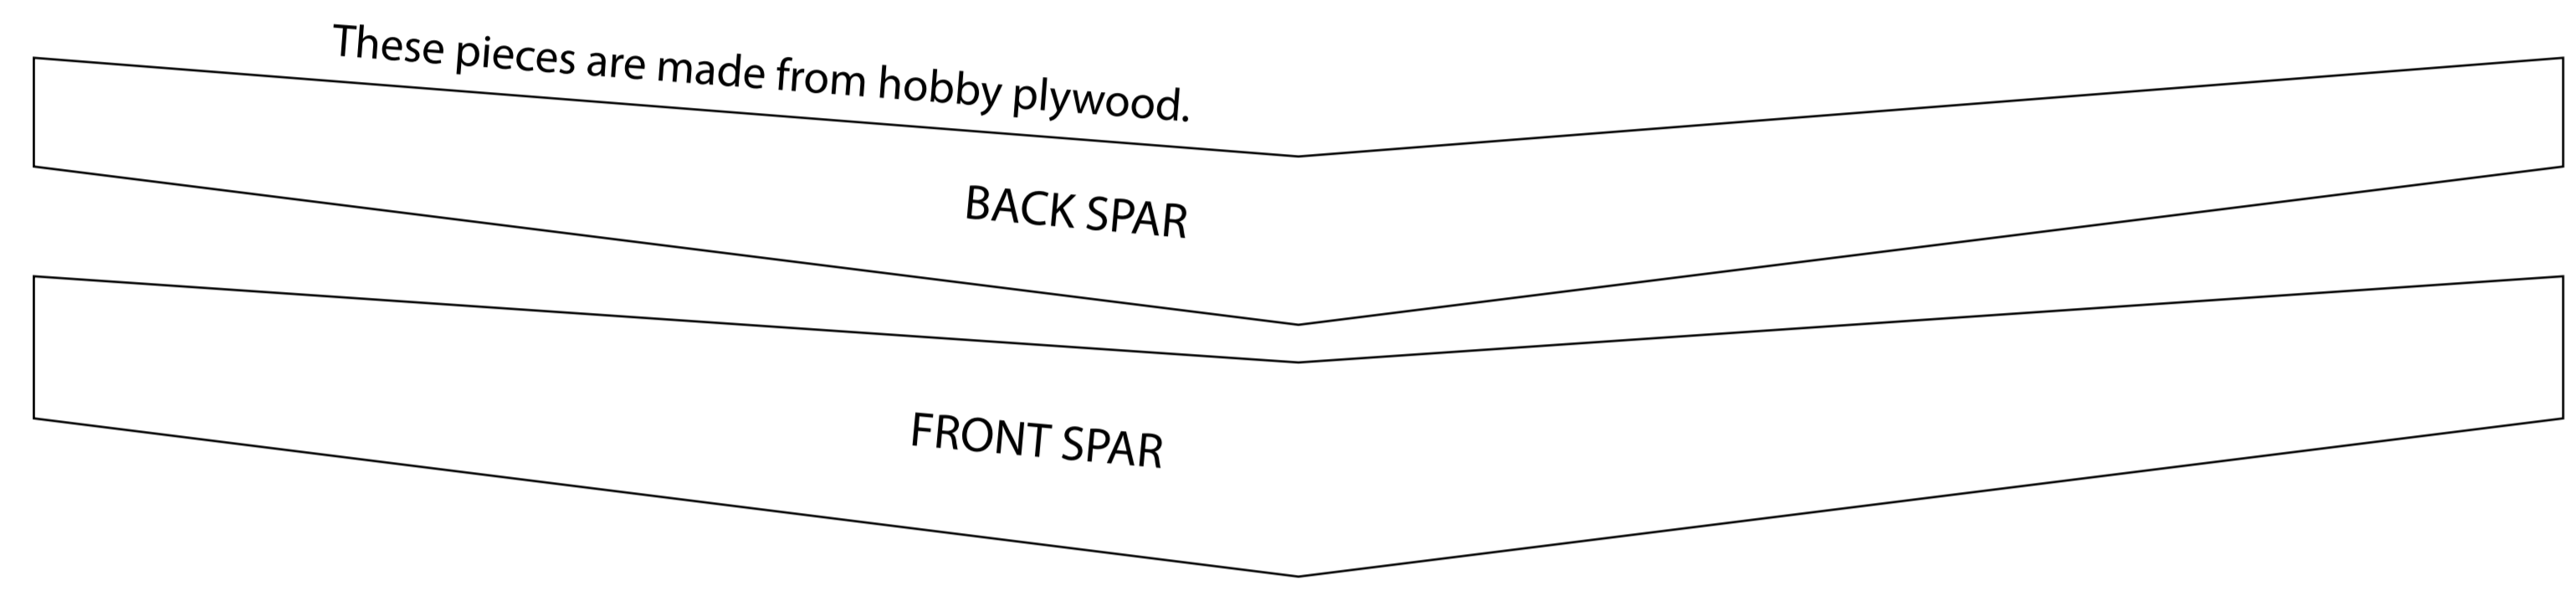
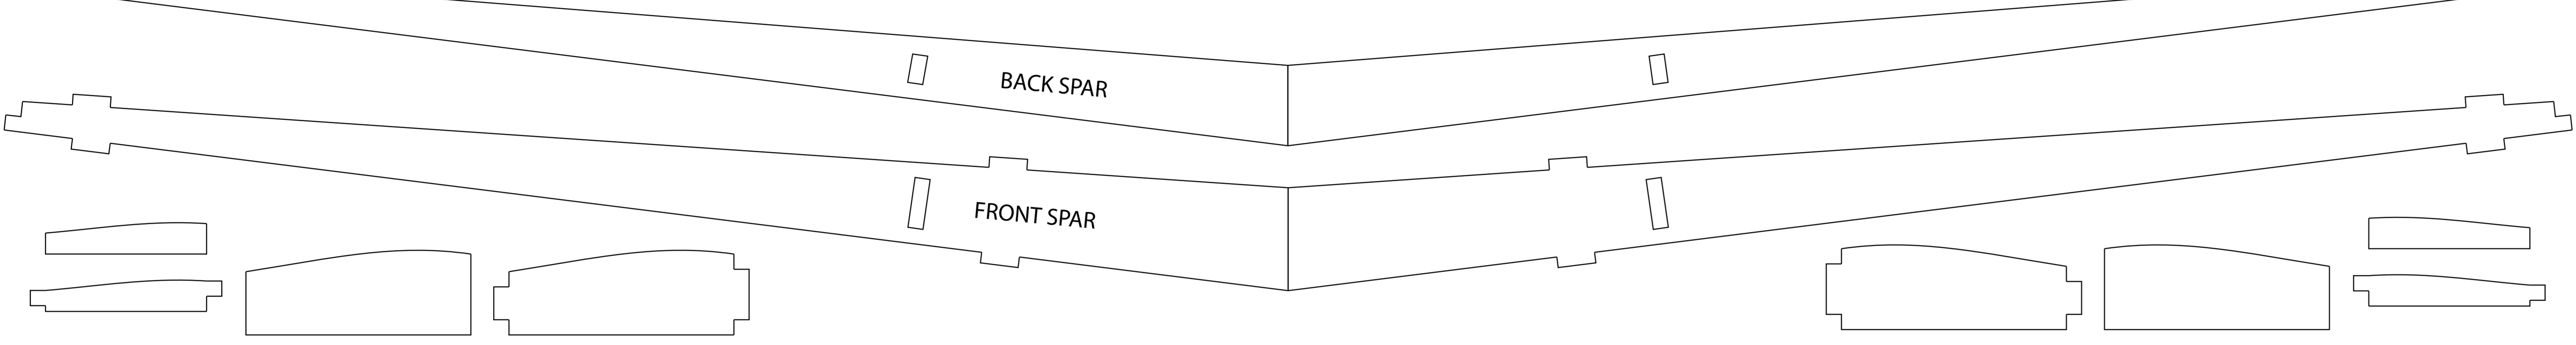
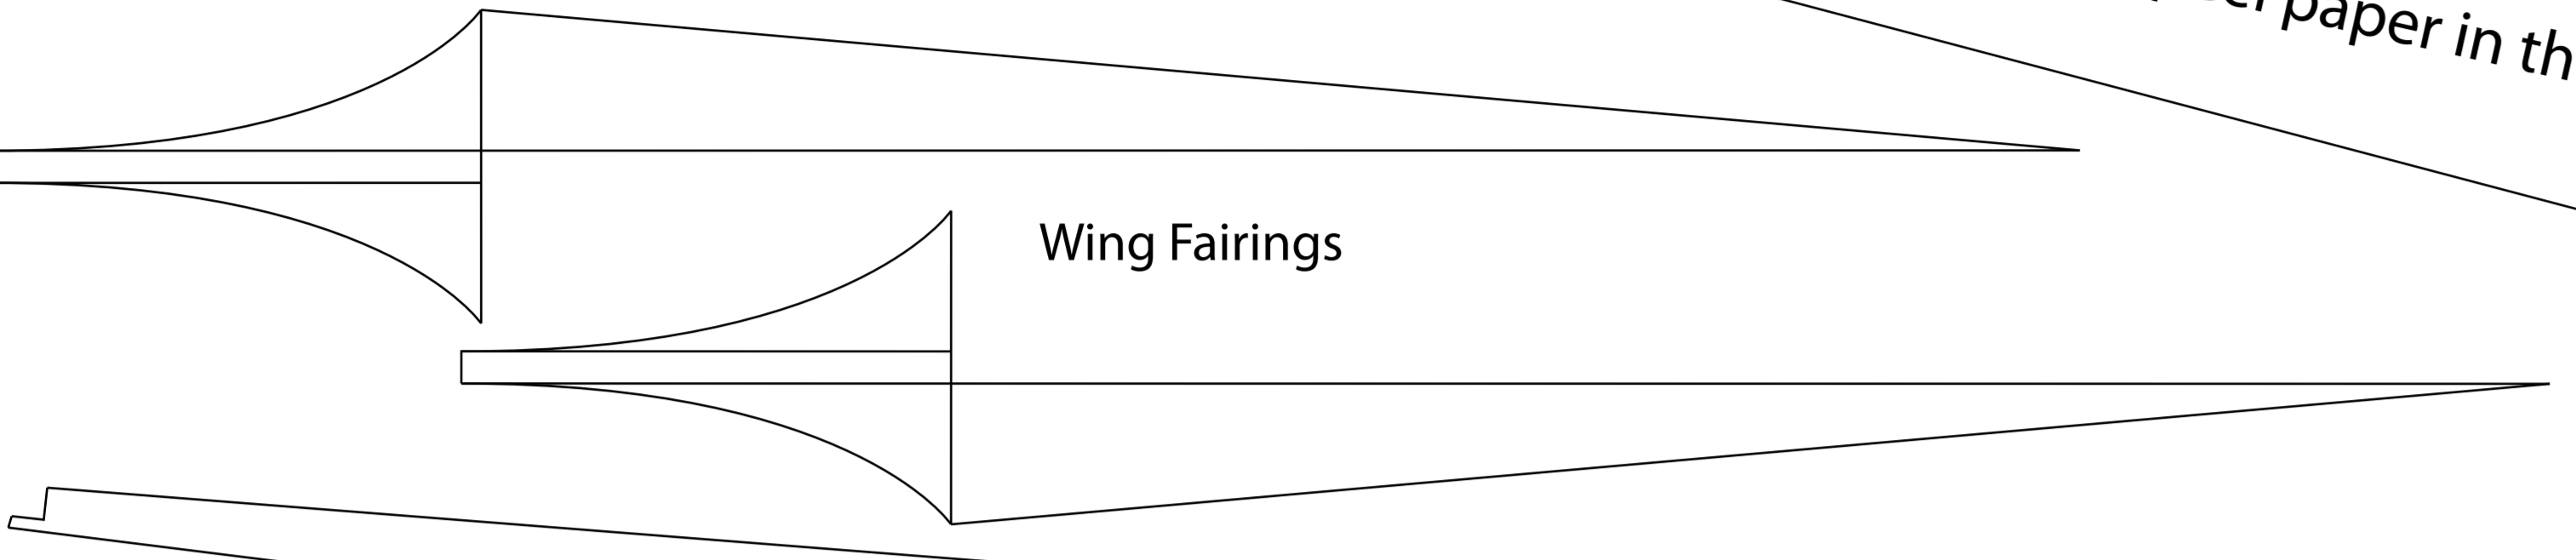
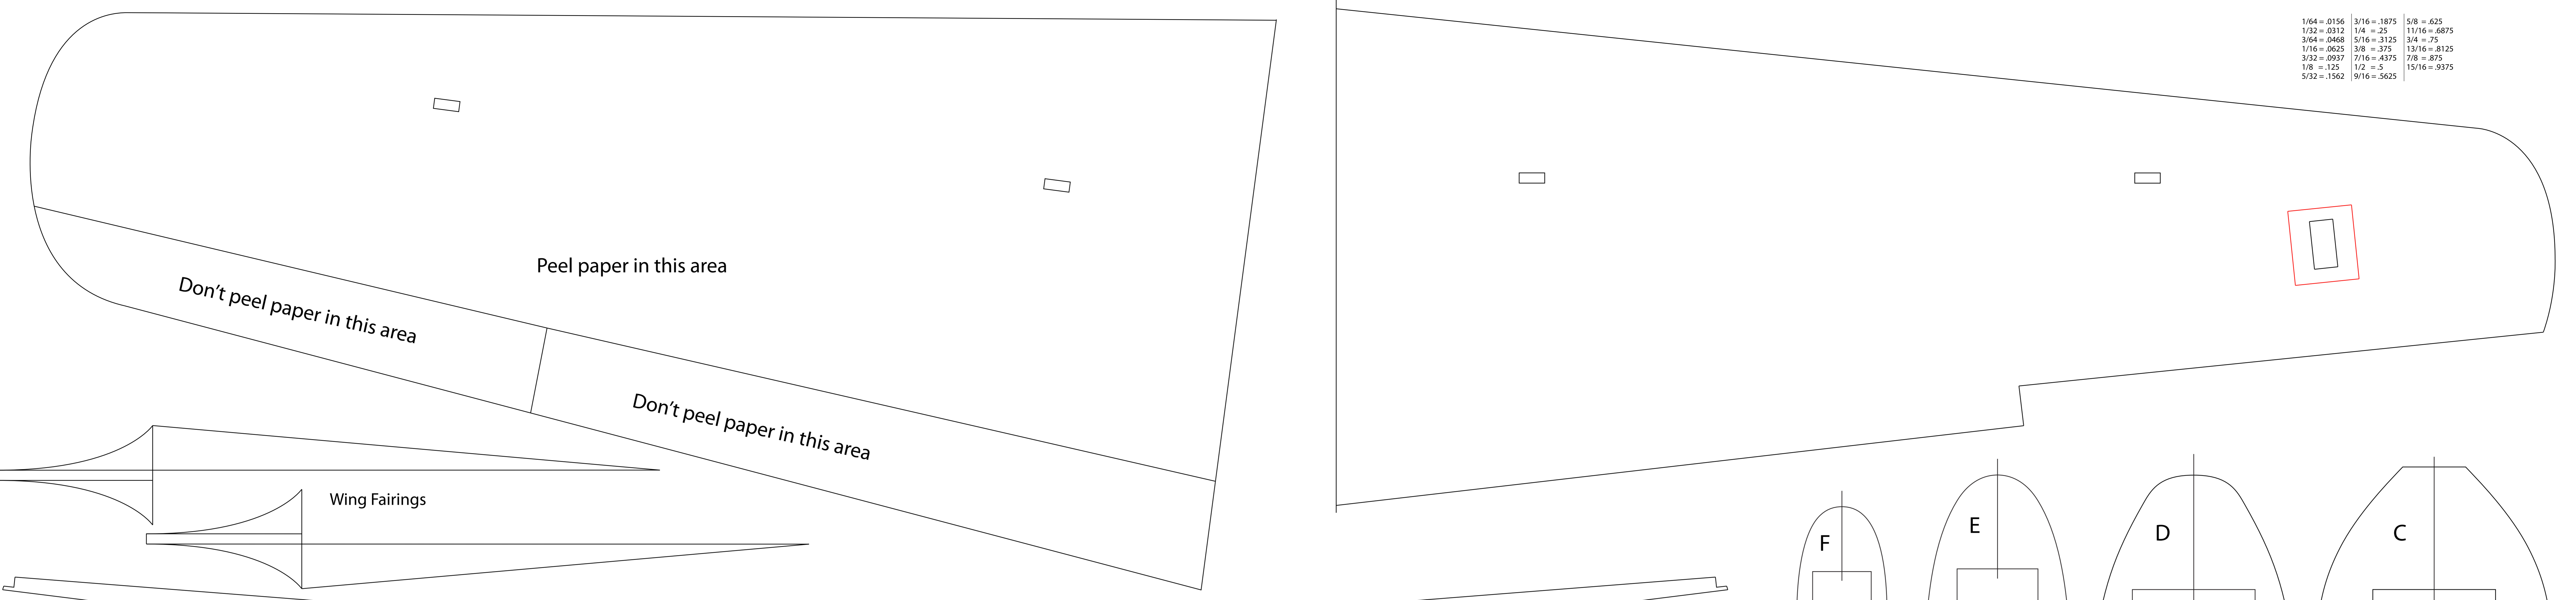
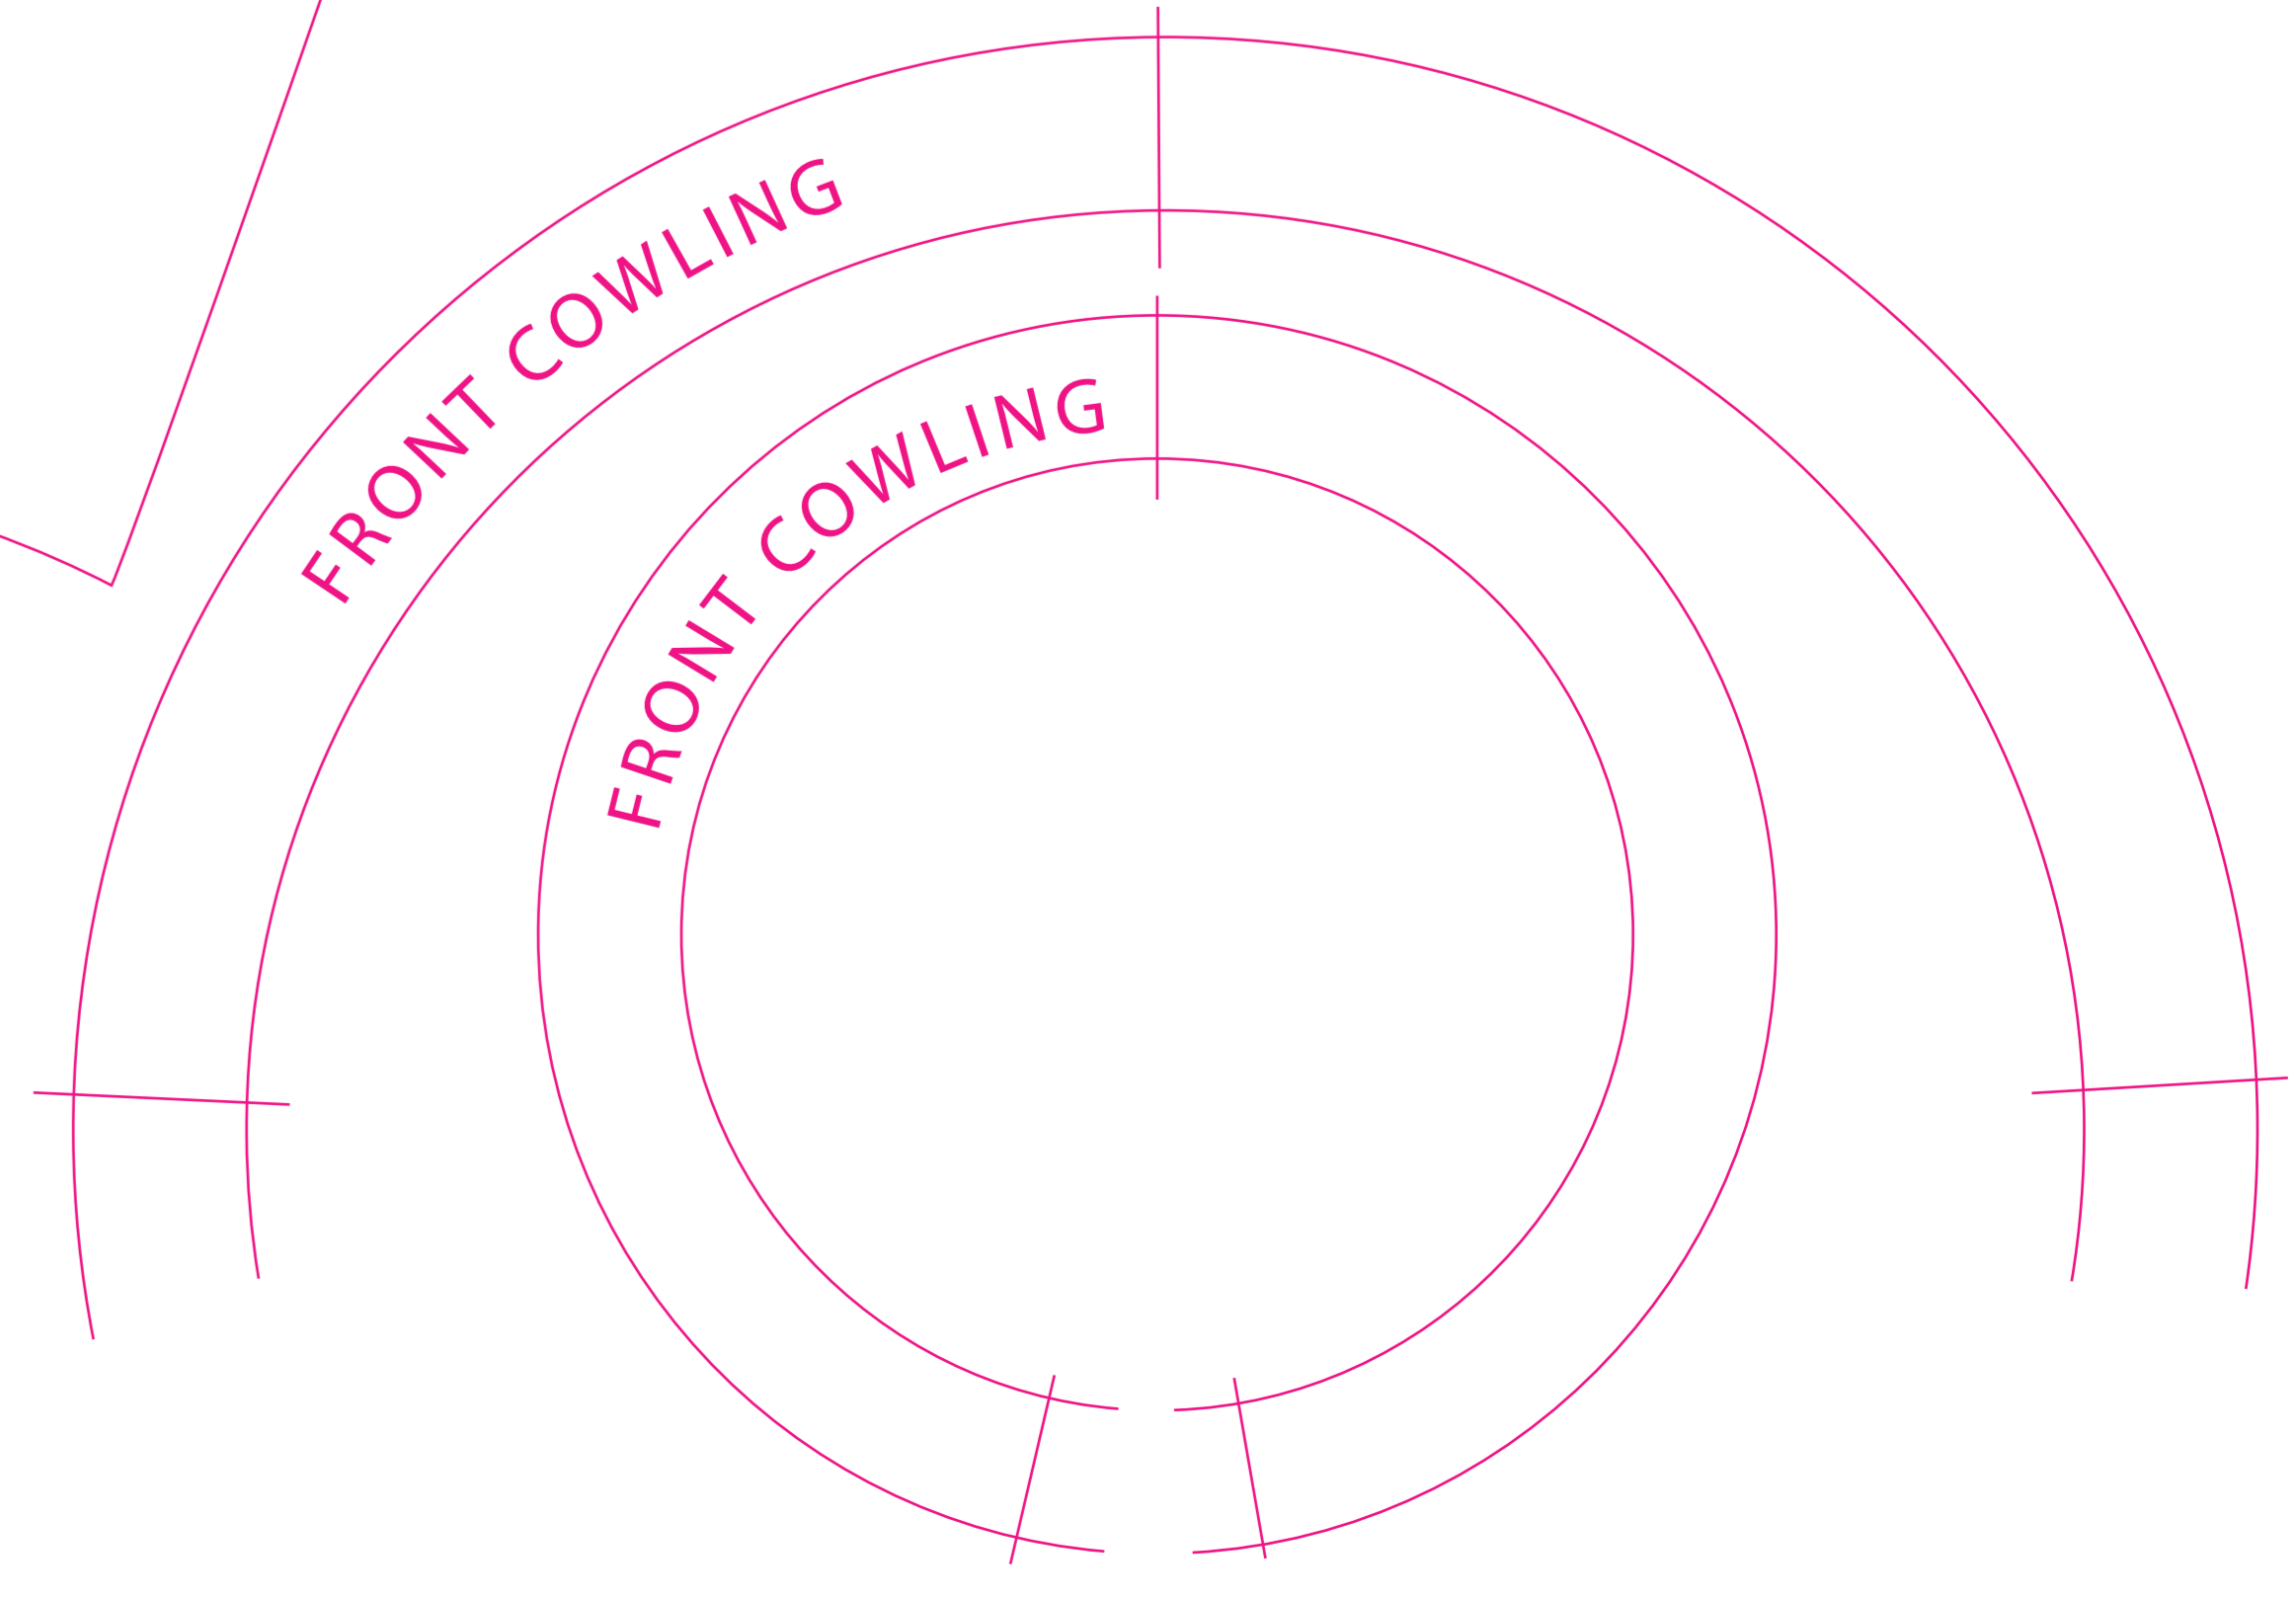
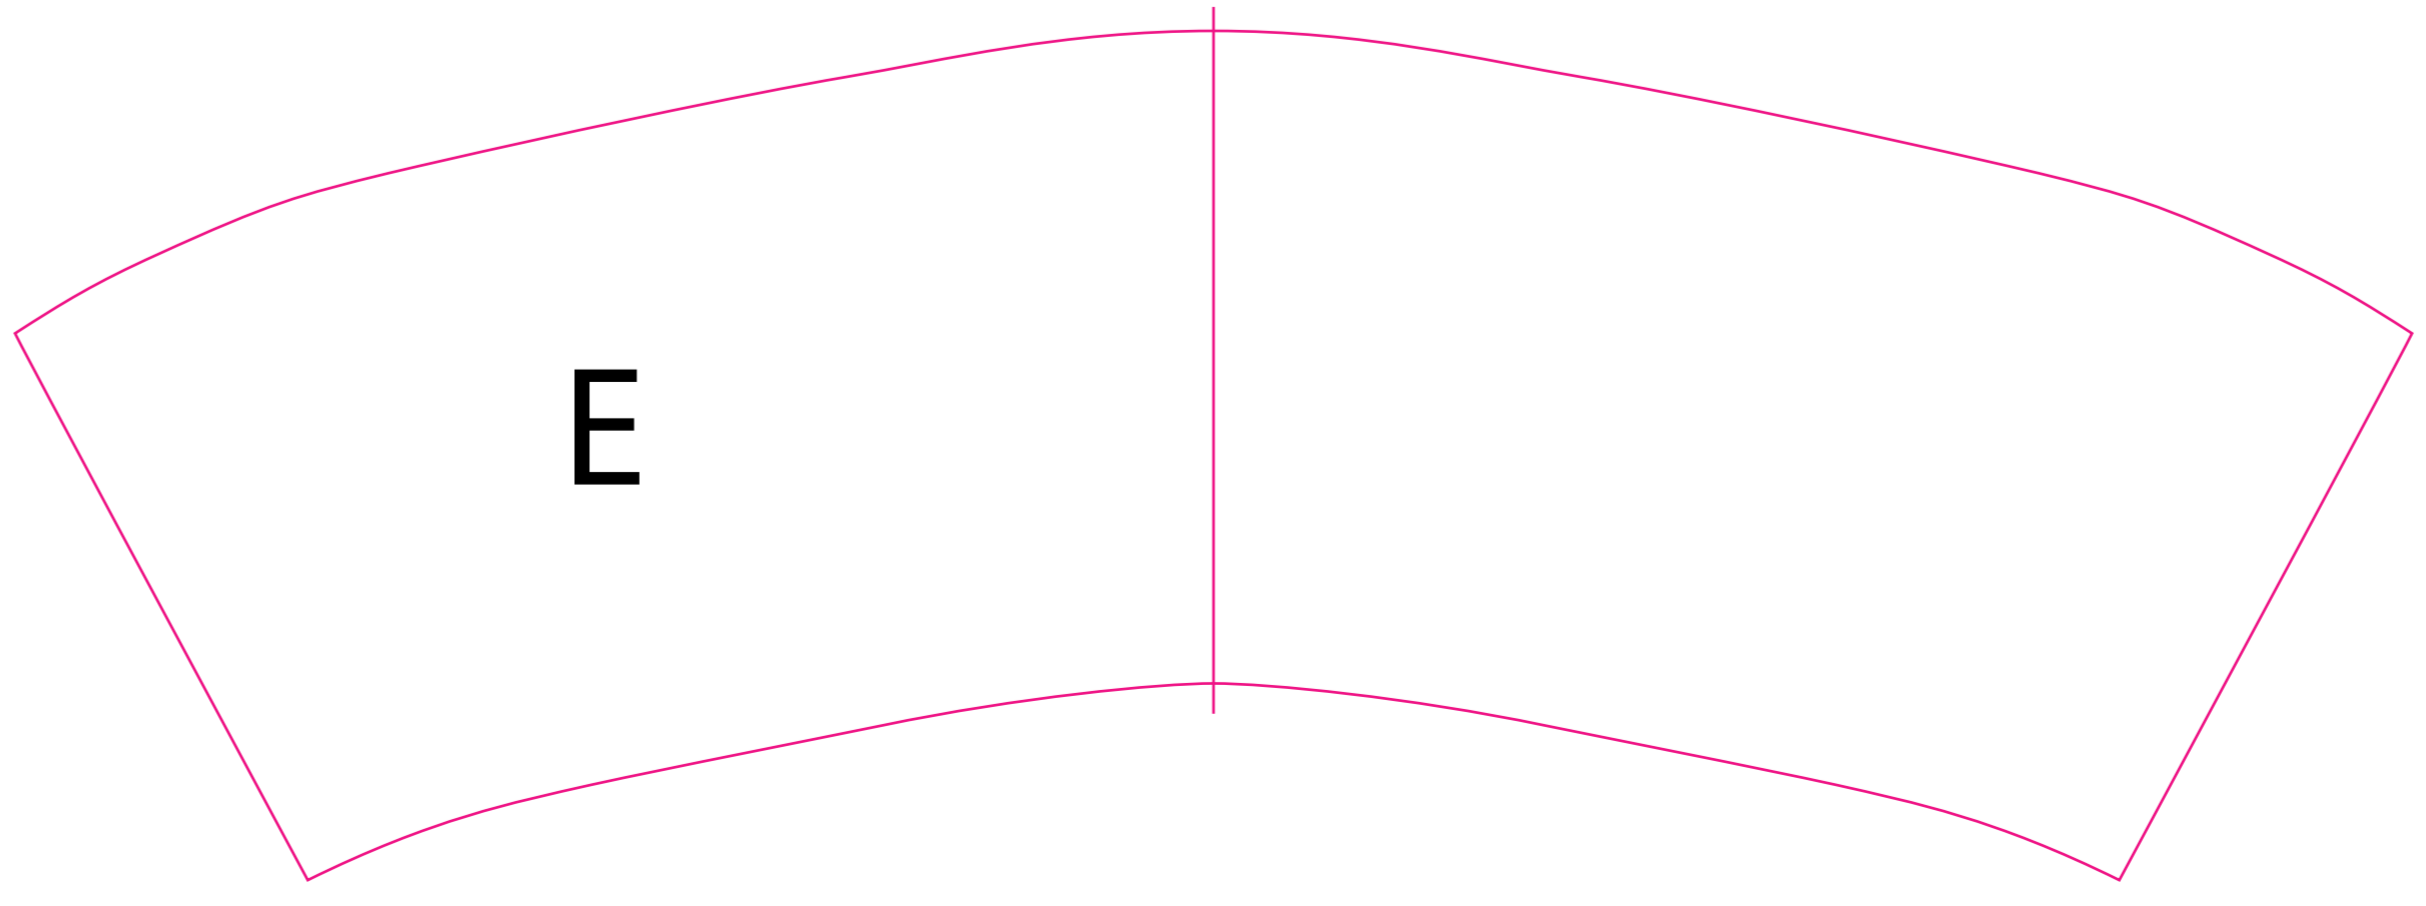
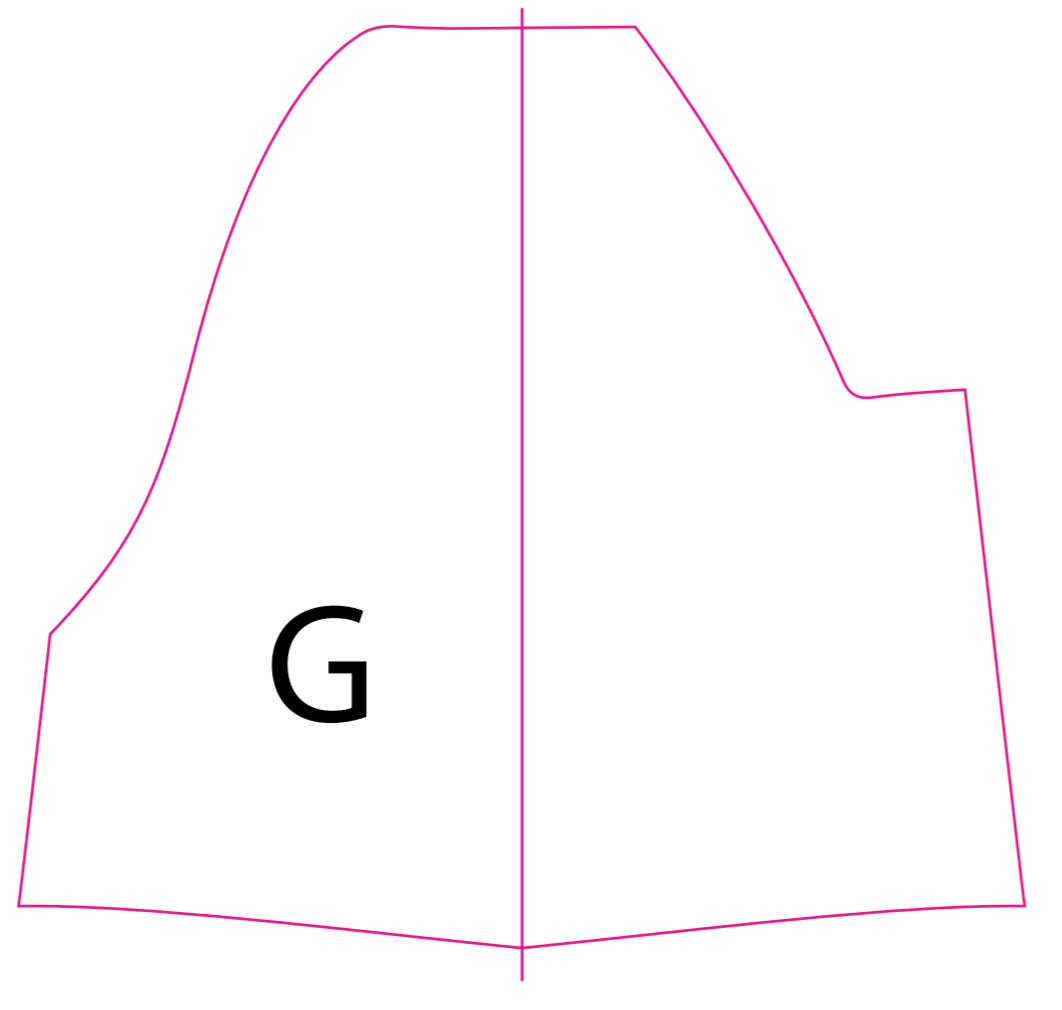
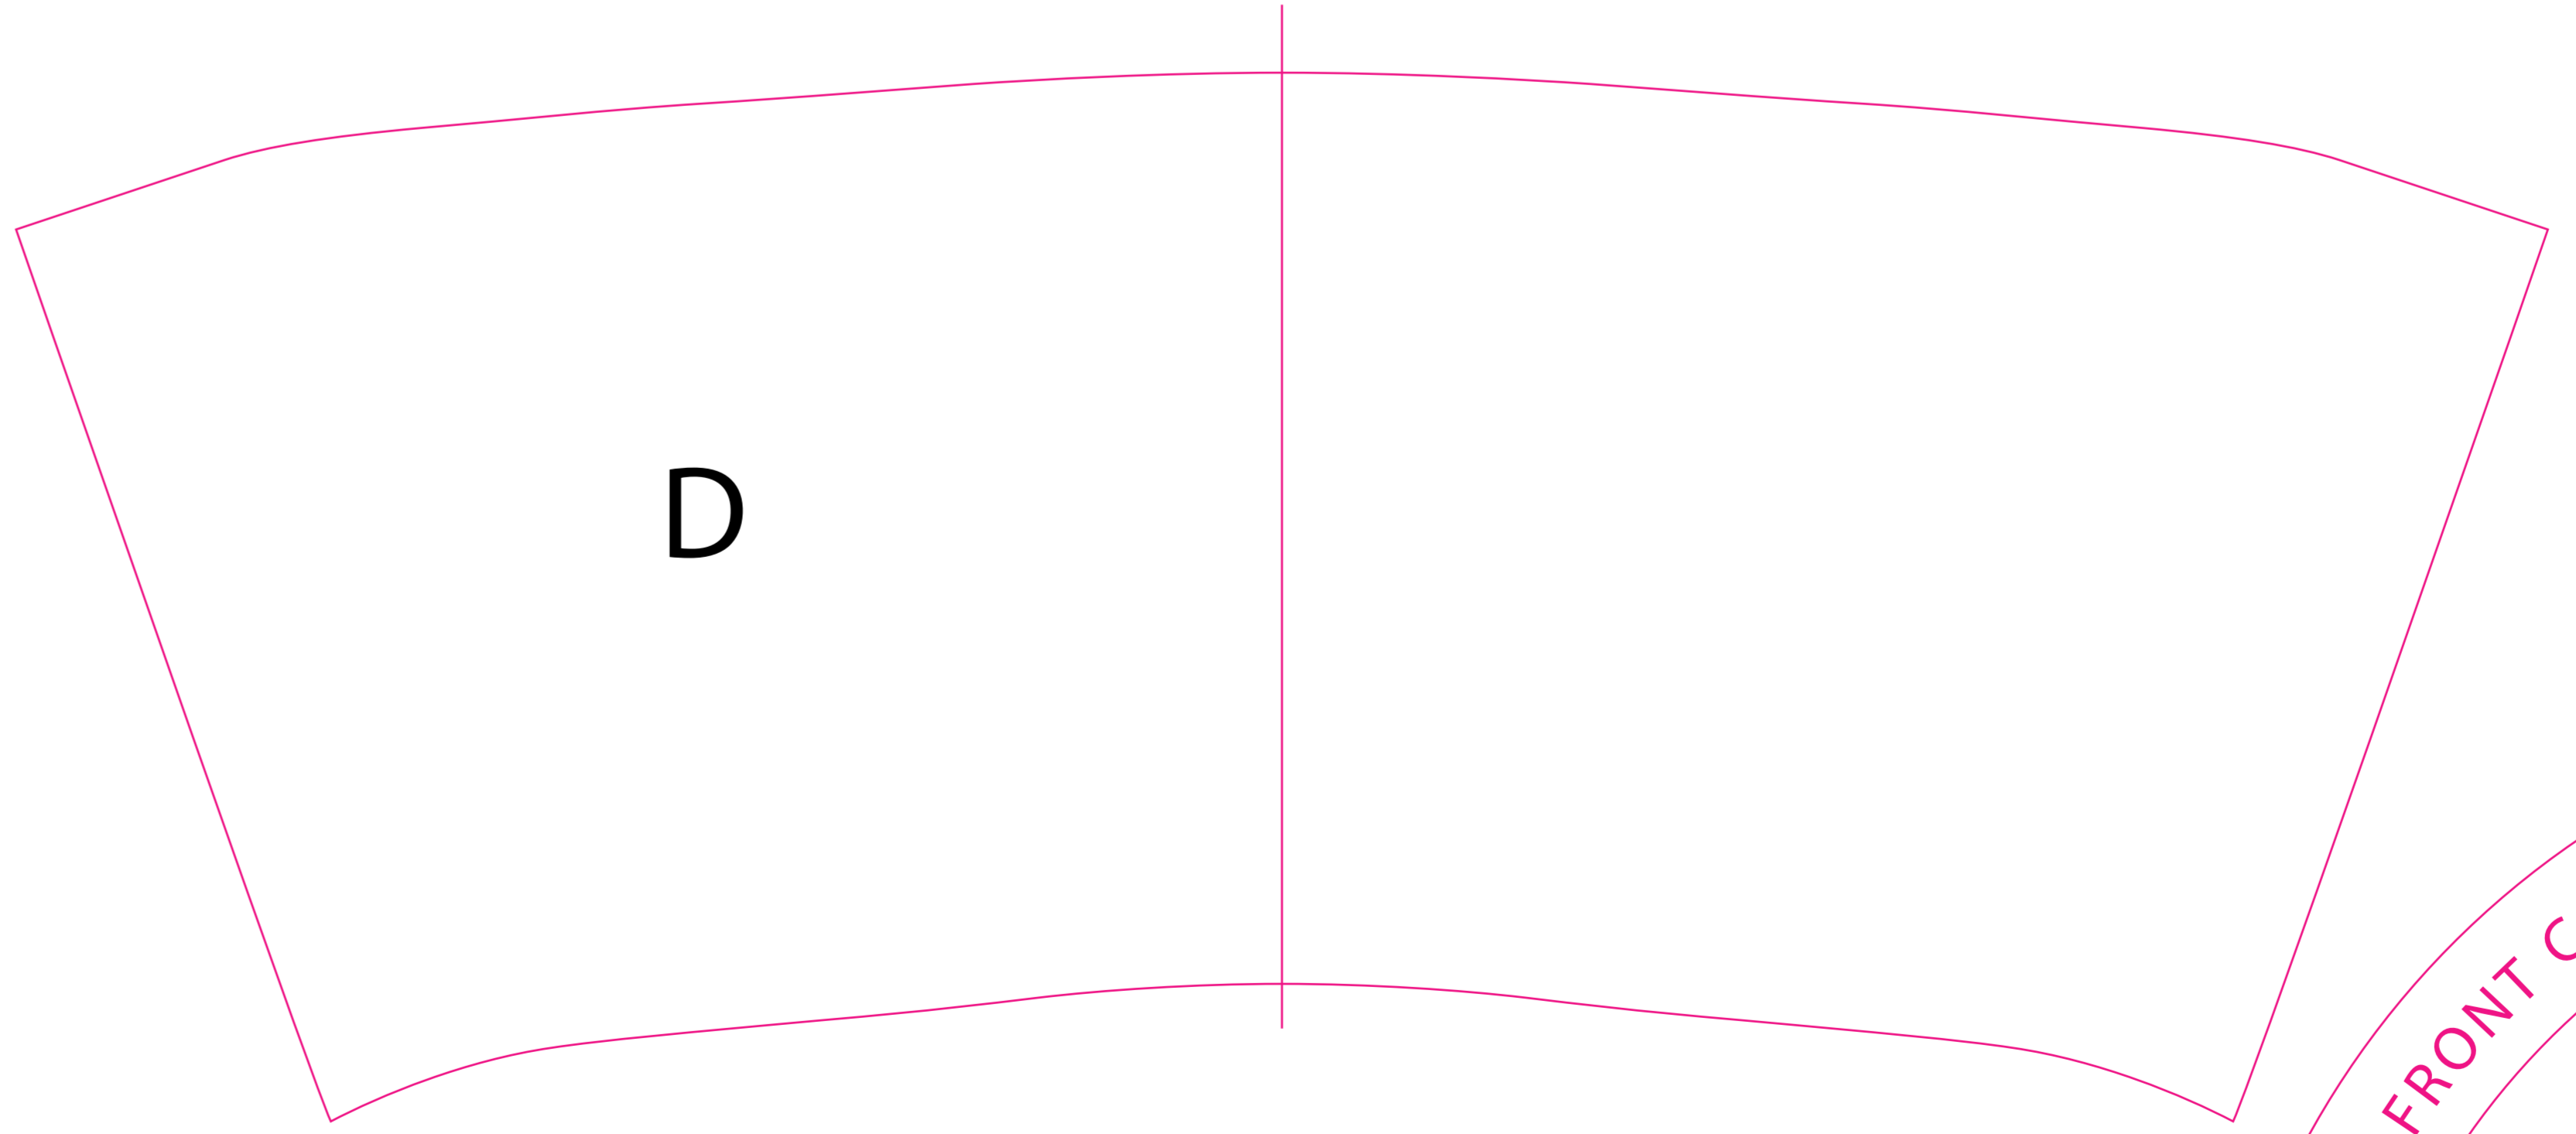
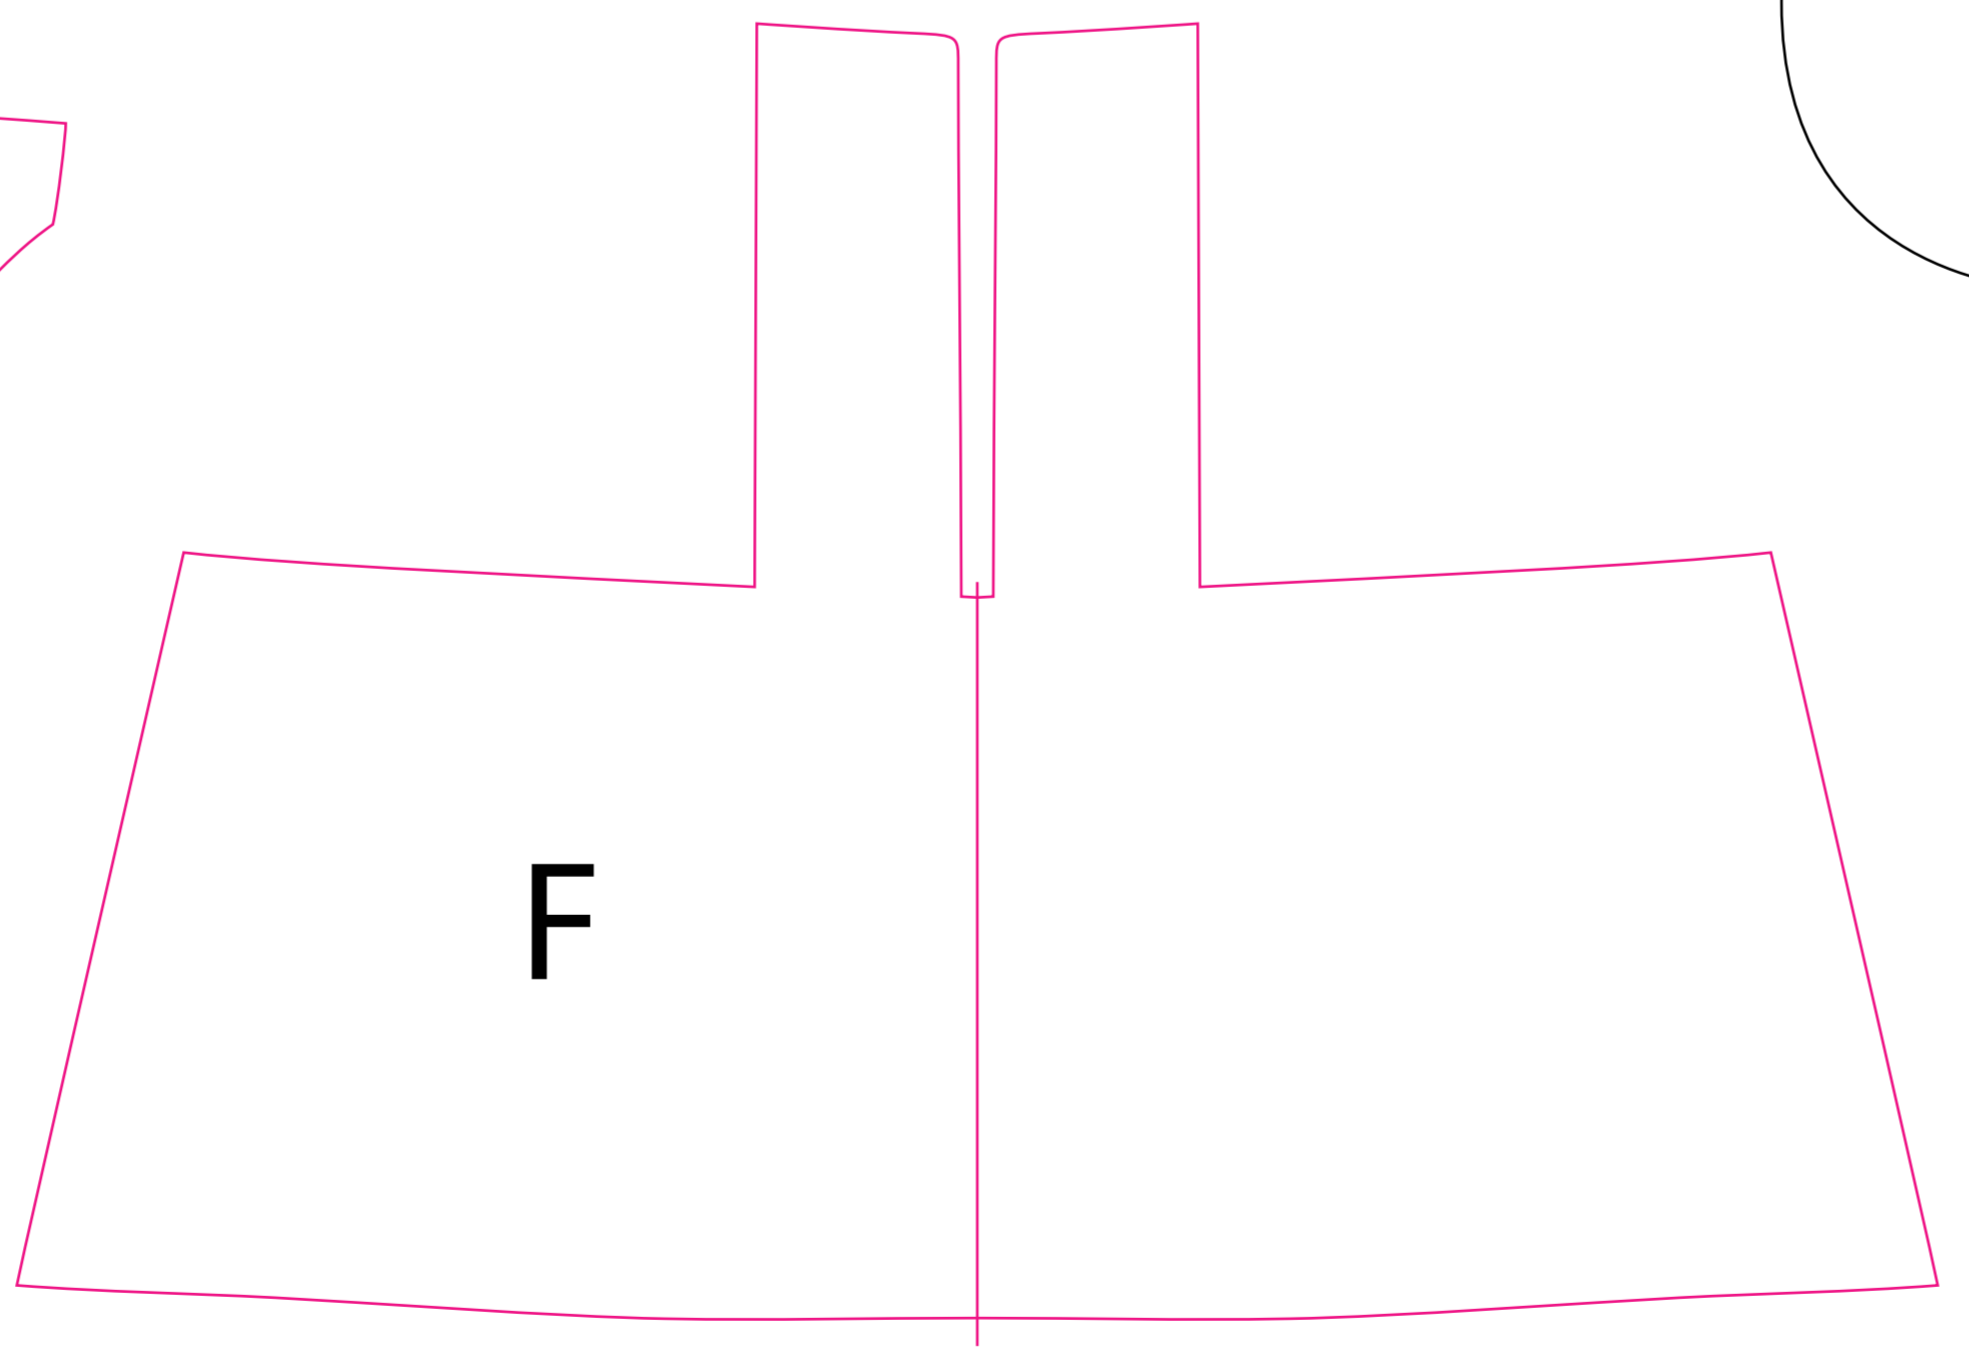
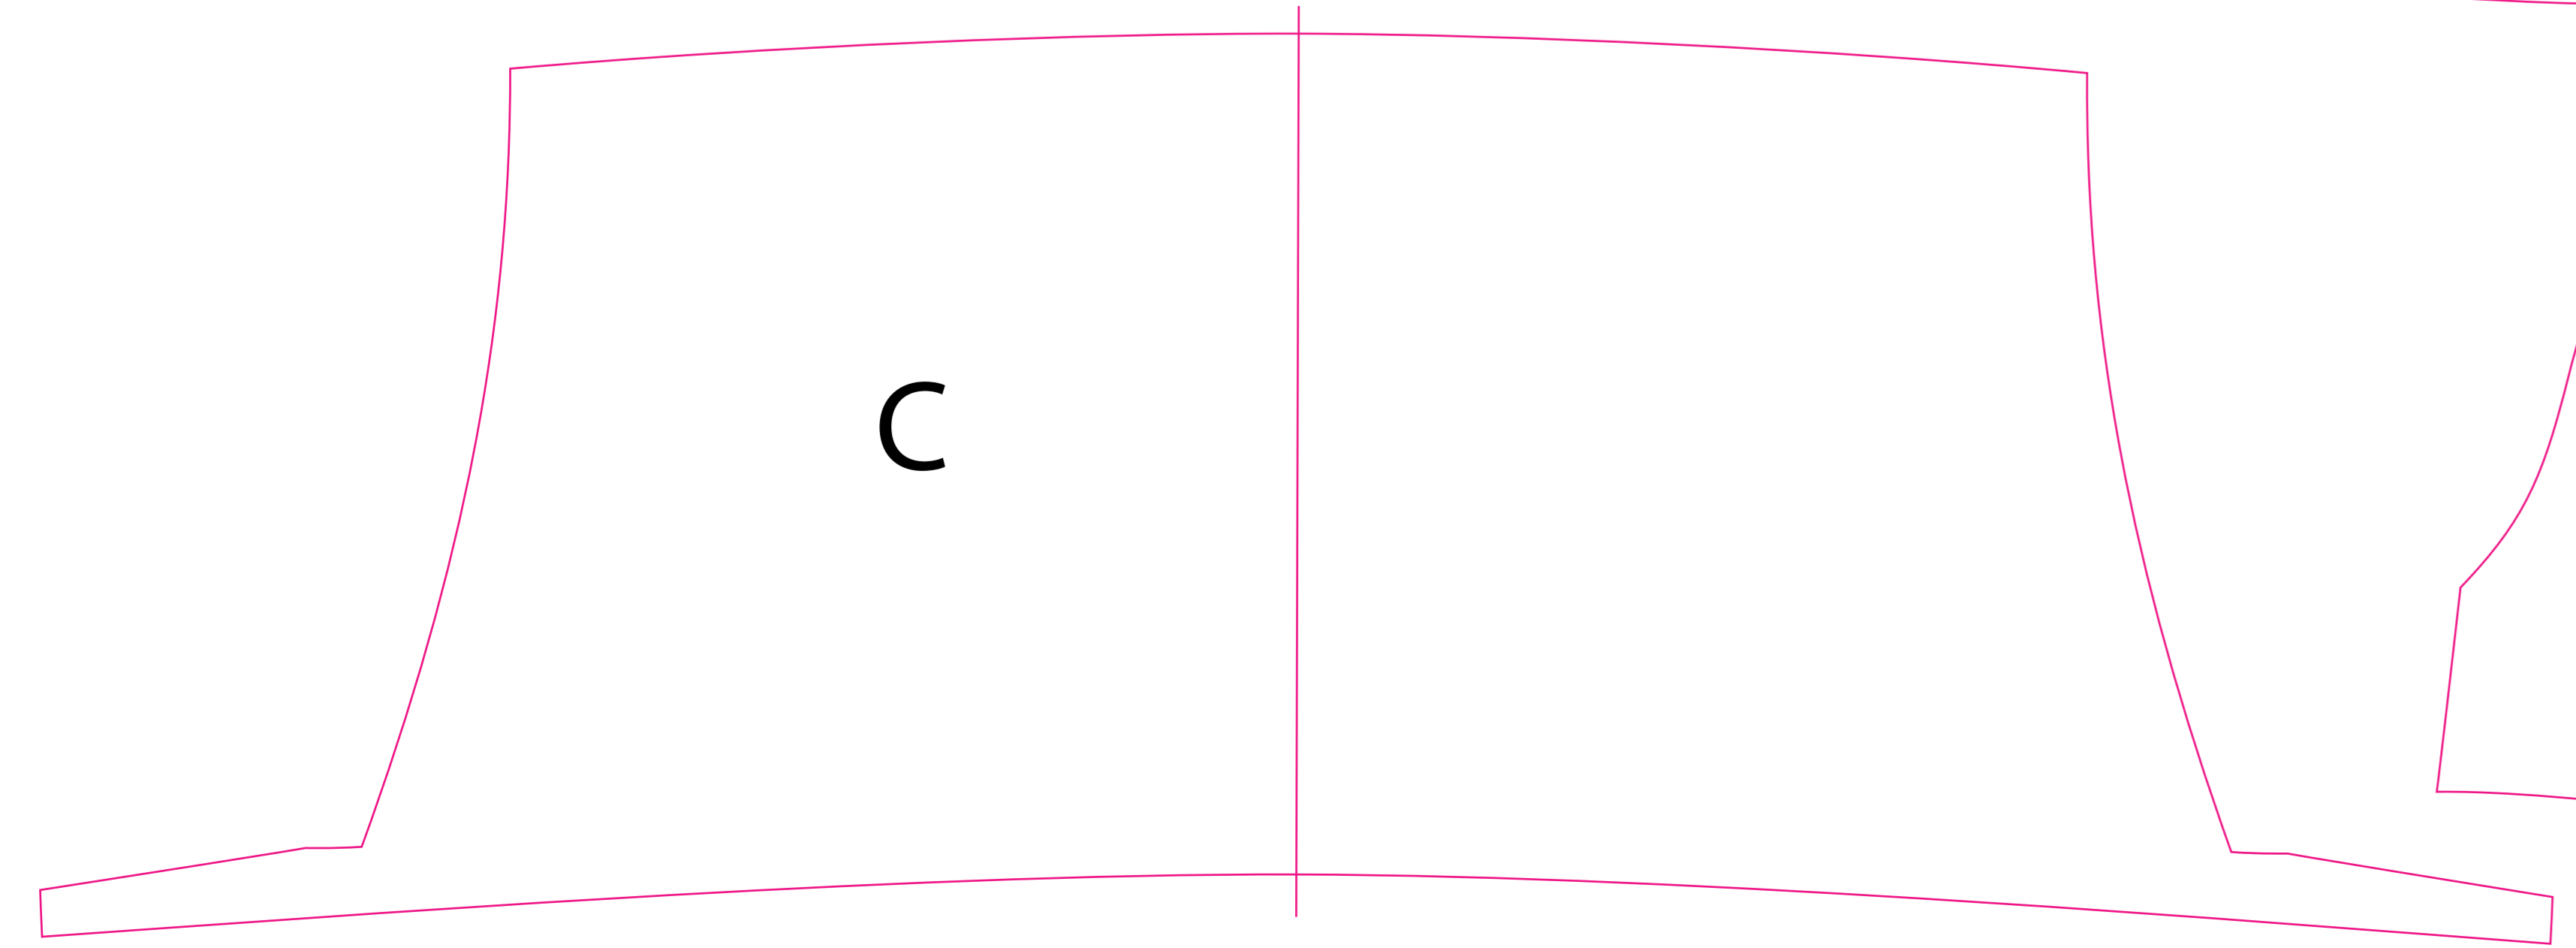
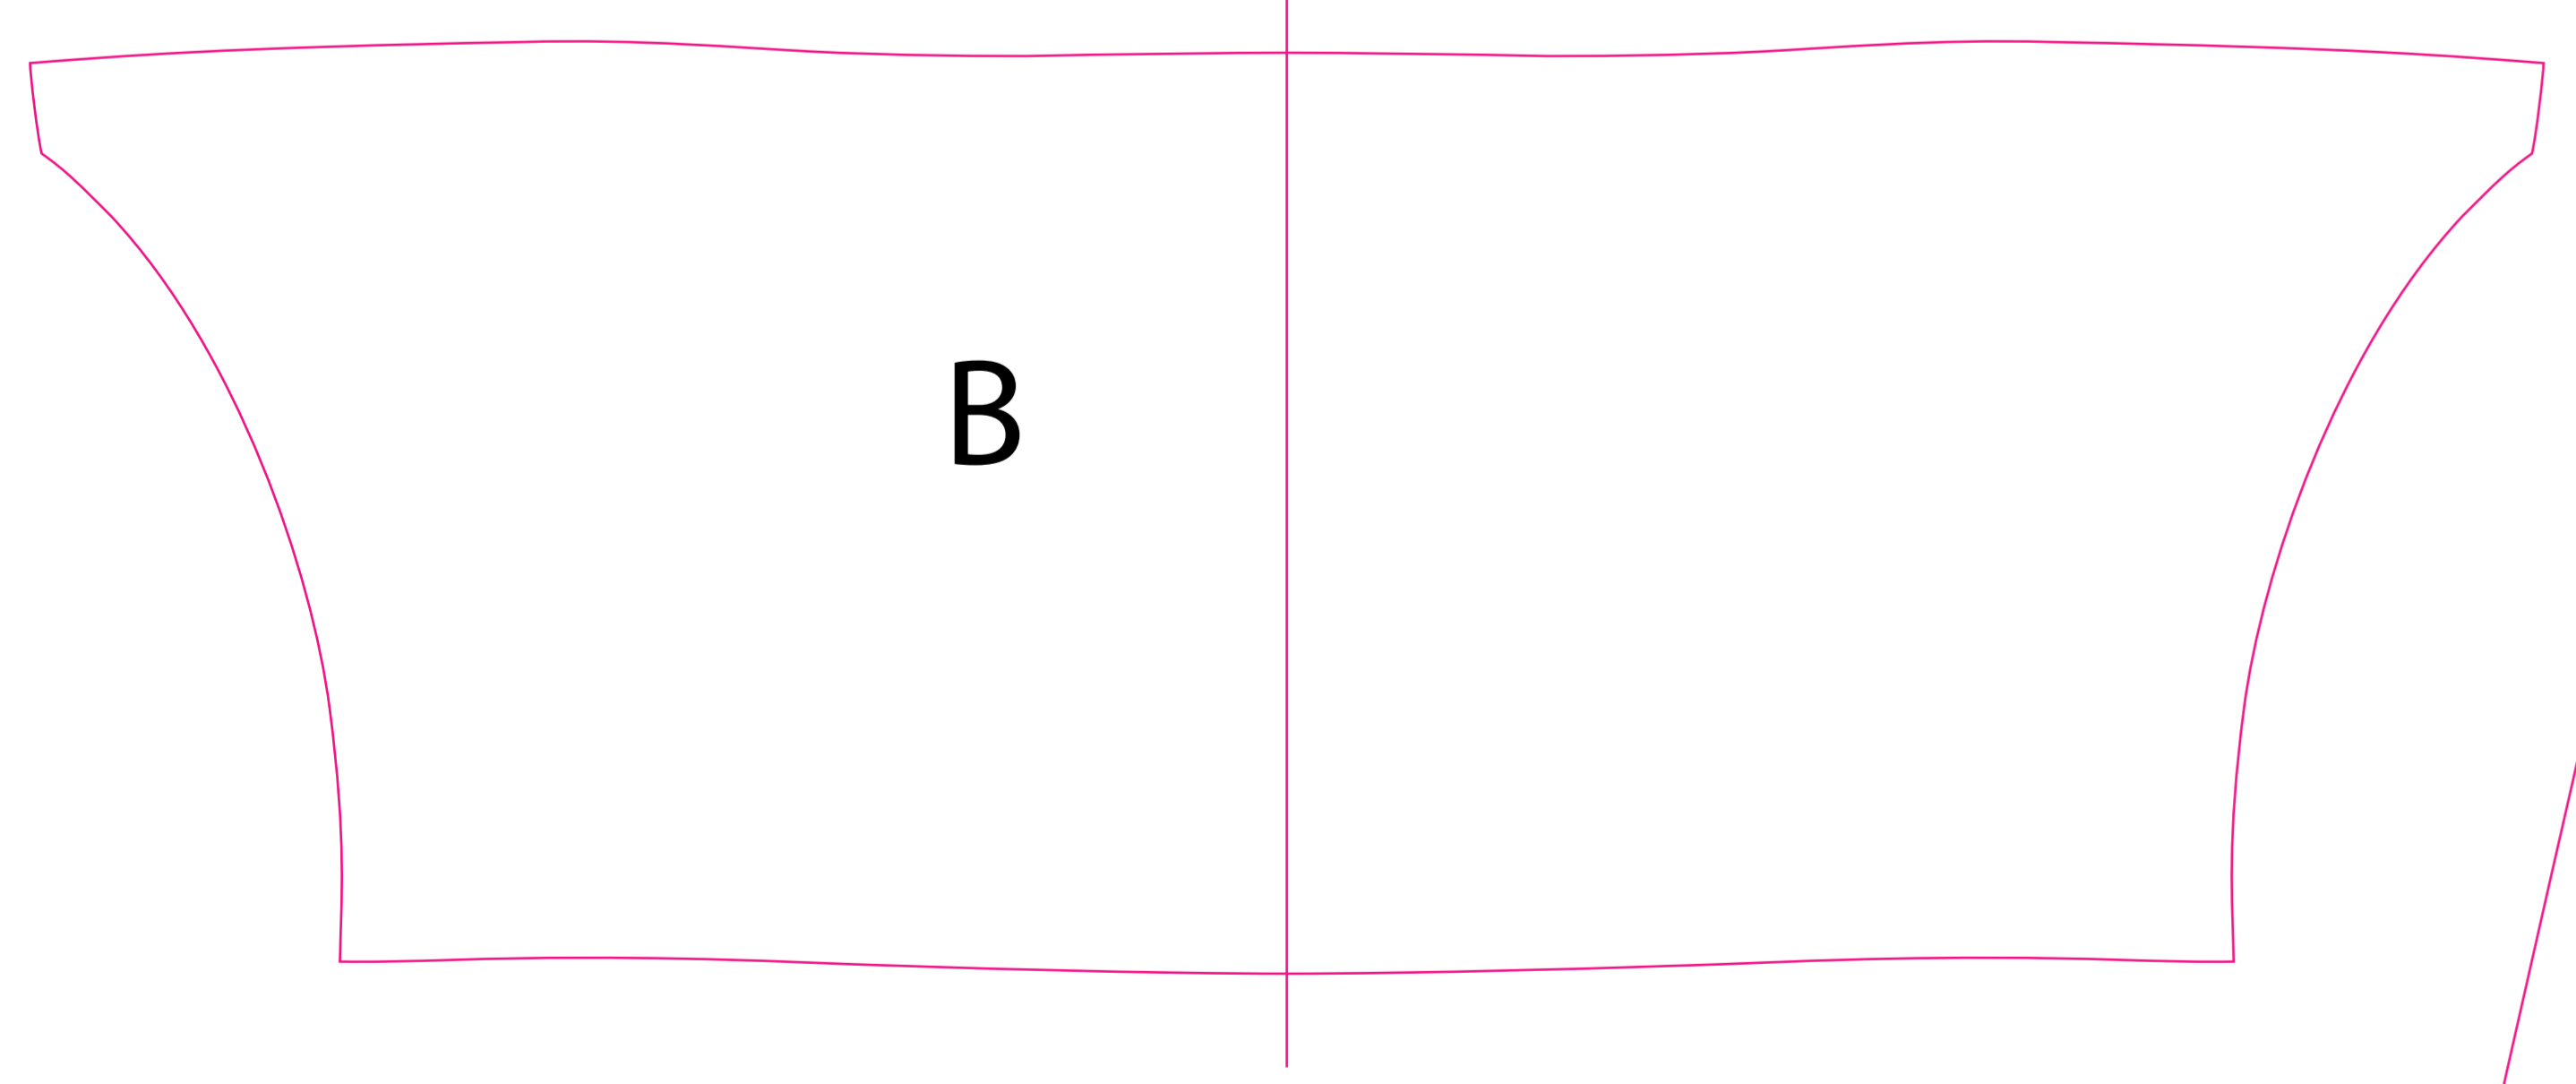
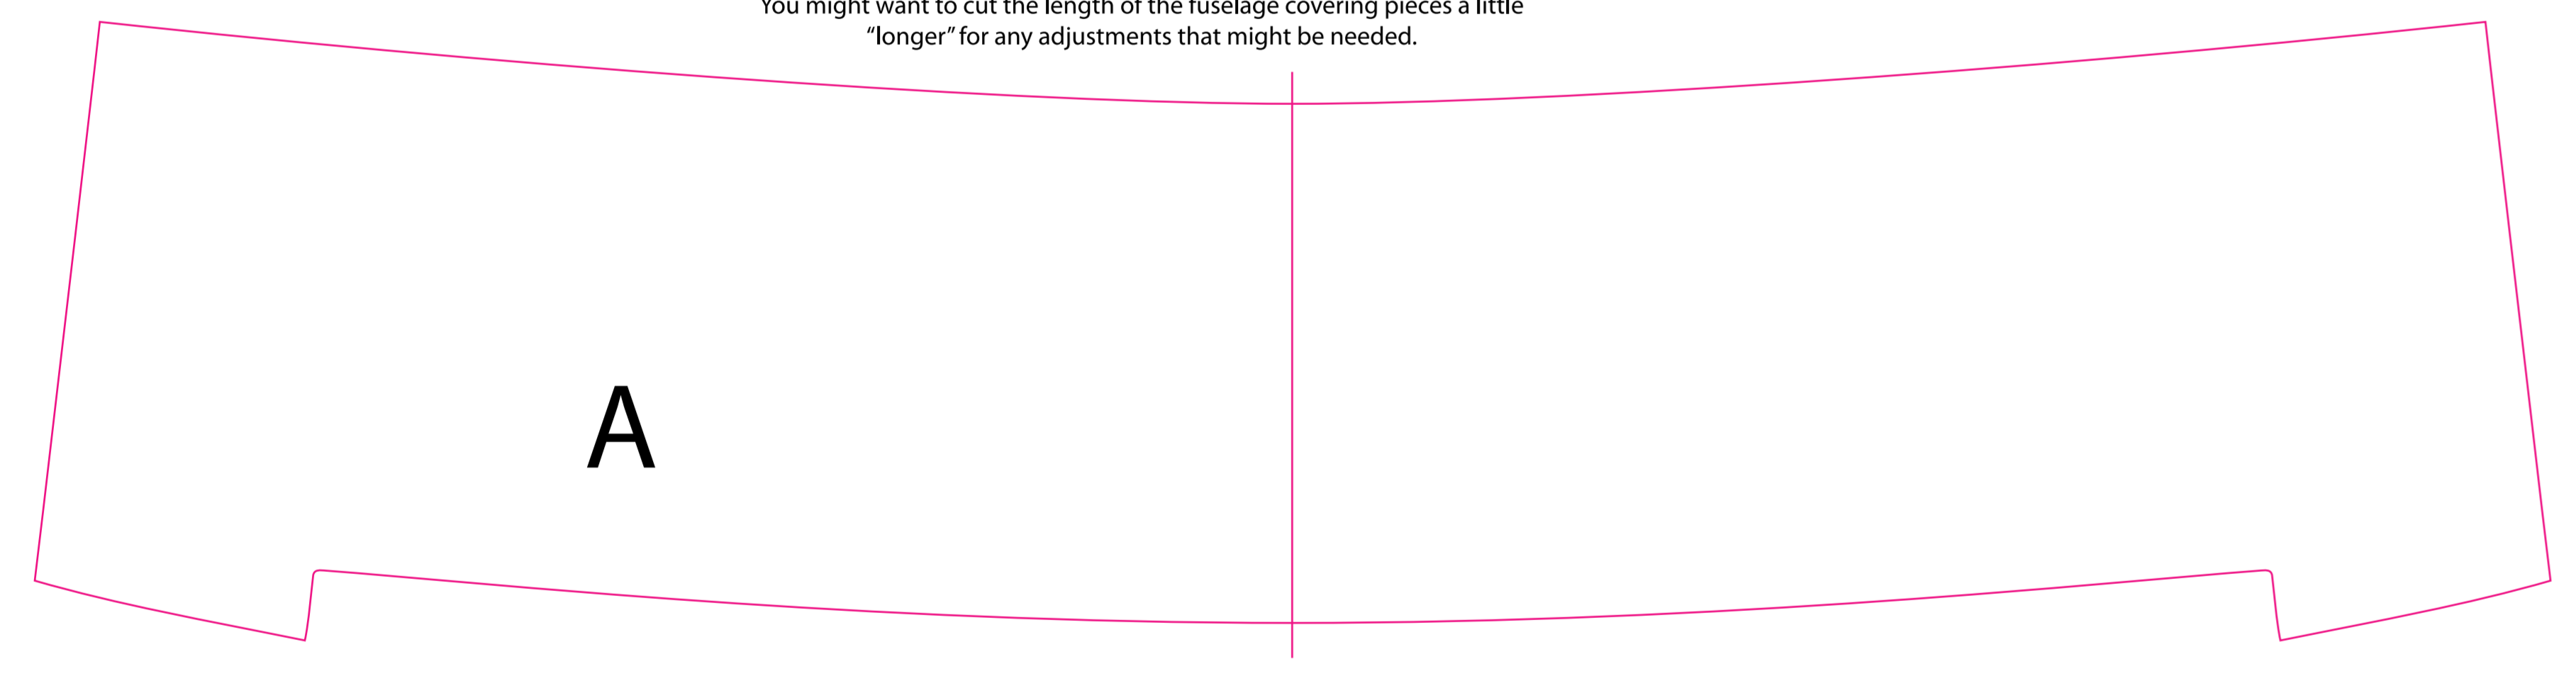
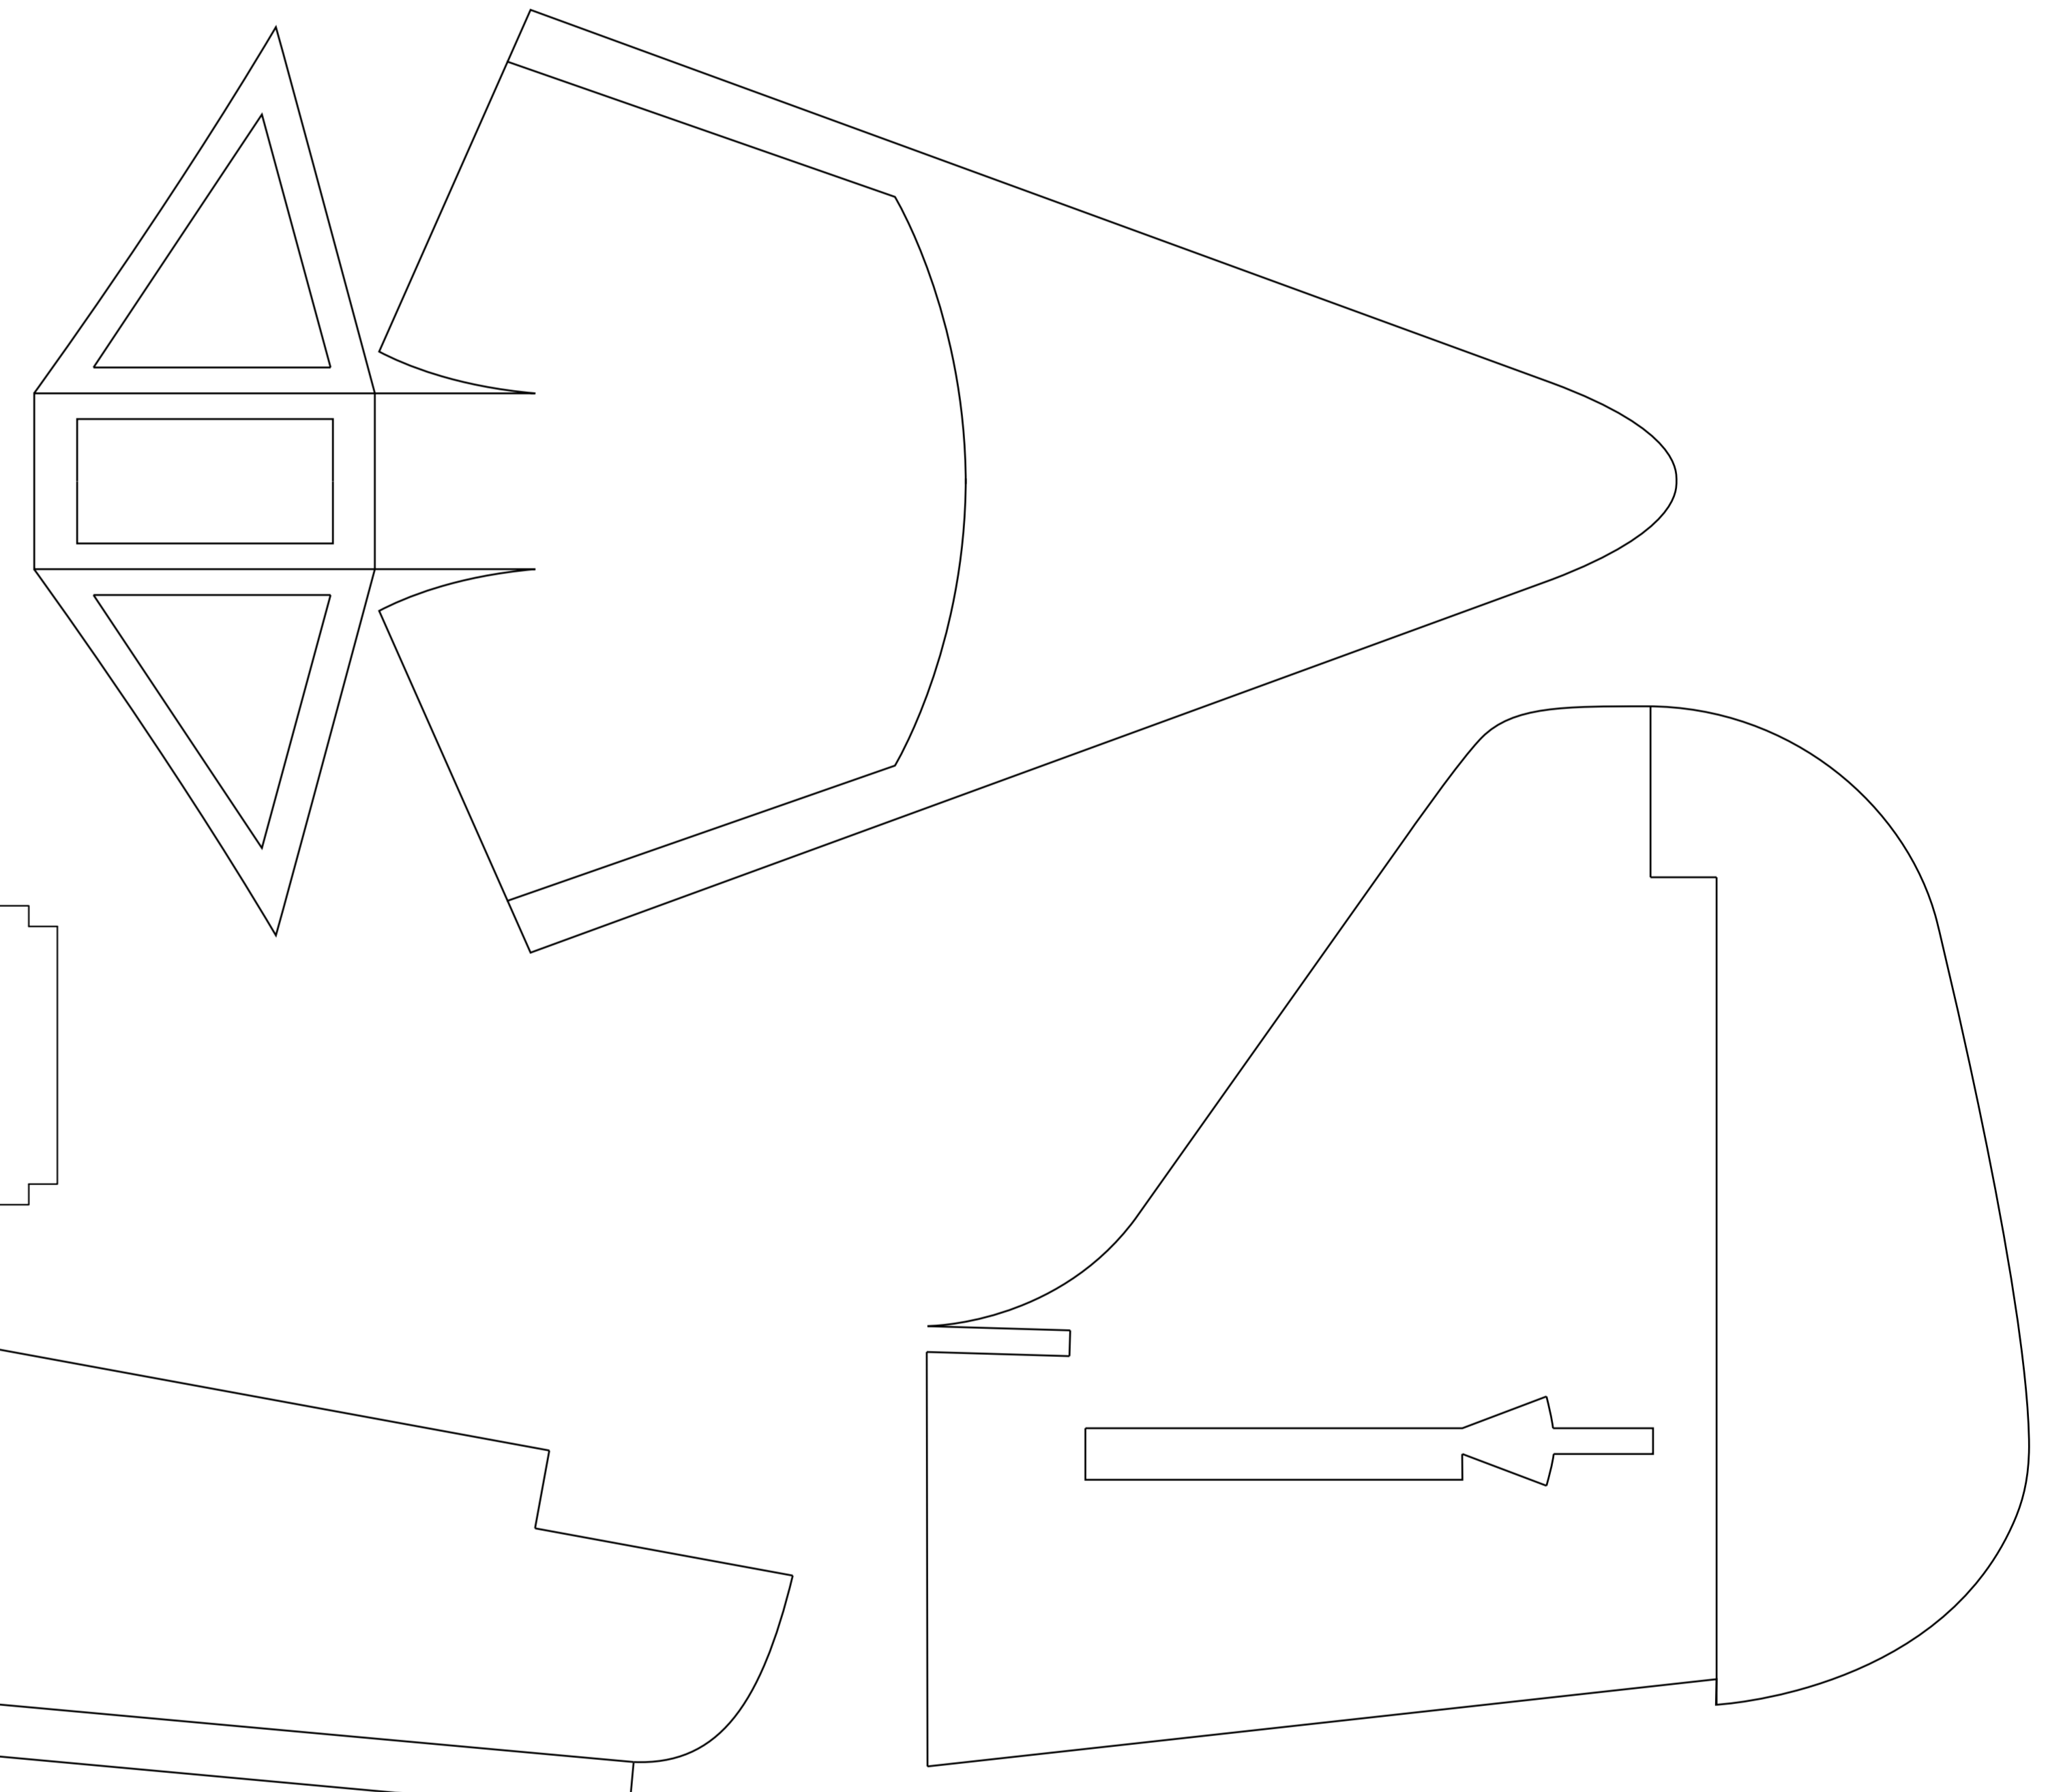
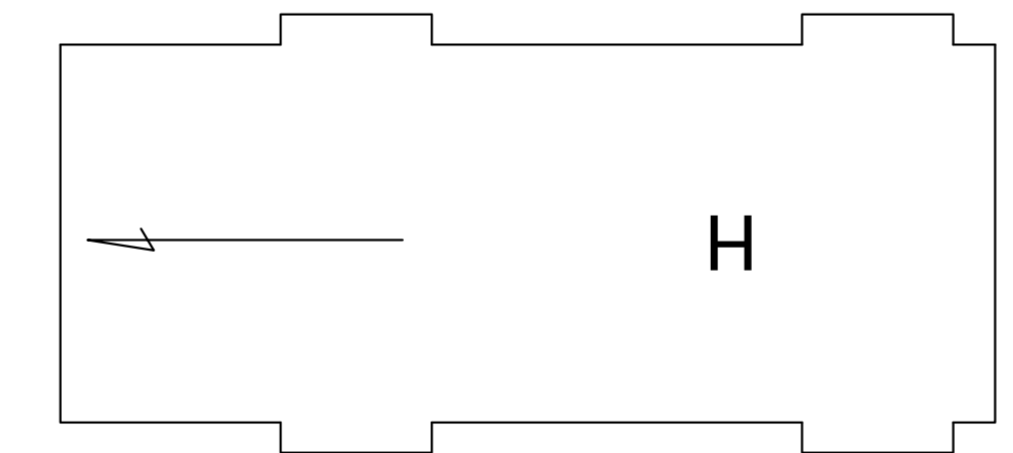
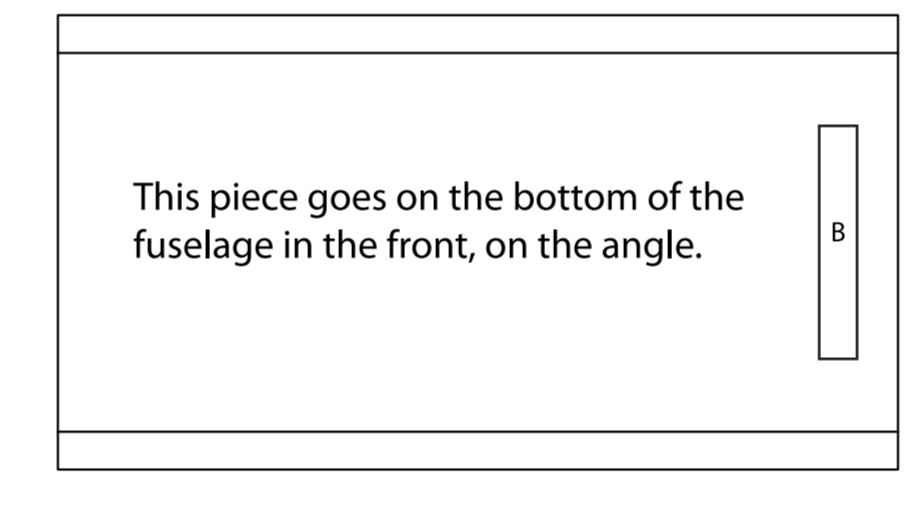


1/64 = 0156 3/16 = 1875 5/8 = 625
 1/32 = 0312 1/4 = 25 11/16 = 6875
 3/64 = 0468 5/16 = 3125 3/4 = 75
 1/16 = 0625 3/8 = 375 13/16 = 8125
 3/32 = 0937 7/16 = 4375 7/8 = 875
 1/8 = 125 1/2 = 5 15/16 = 9375
 5/32 = 1562 9/16 = 5625

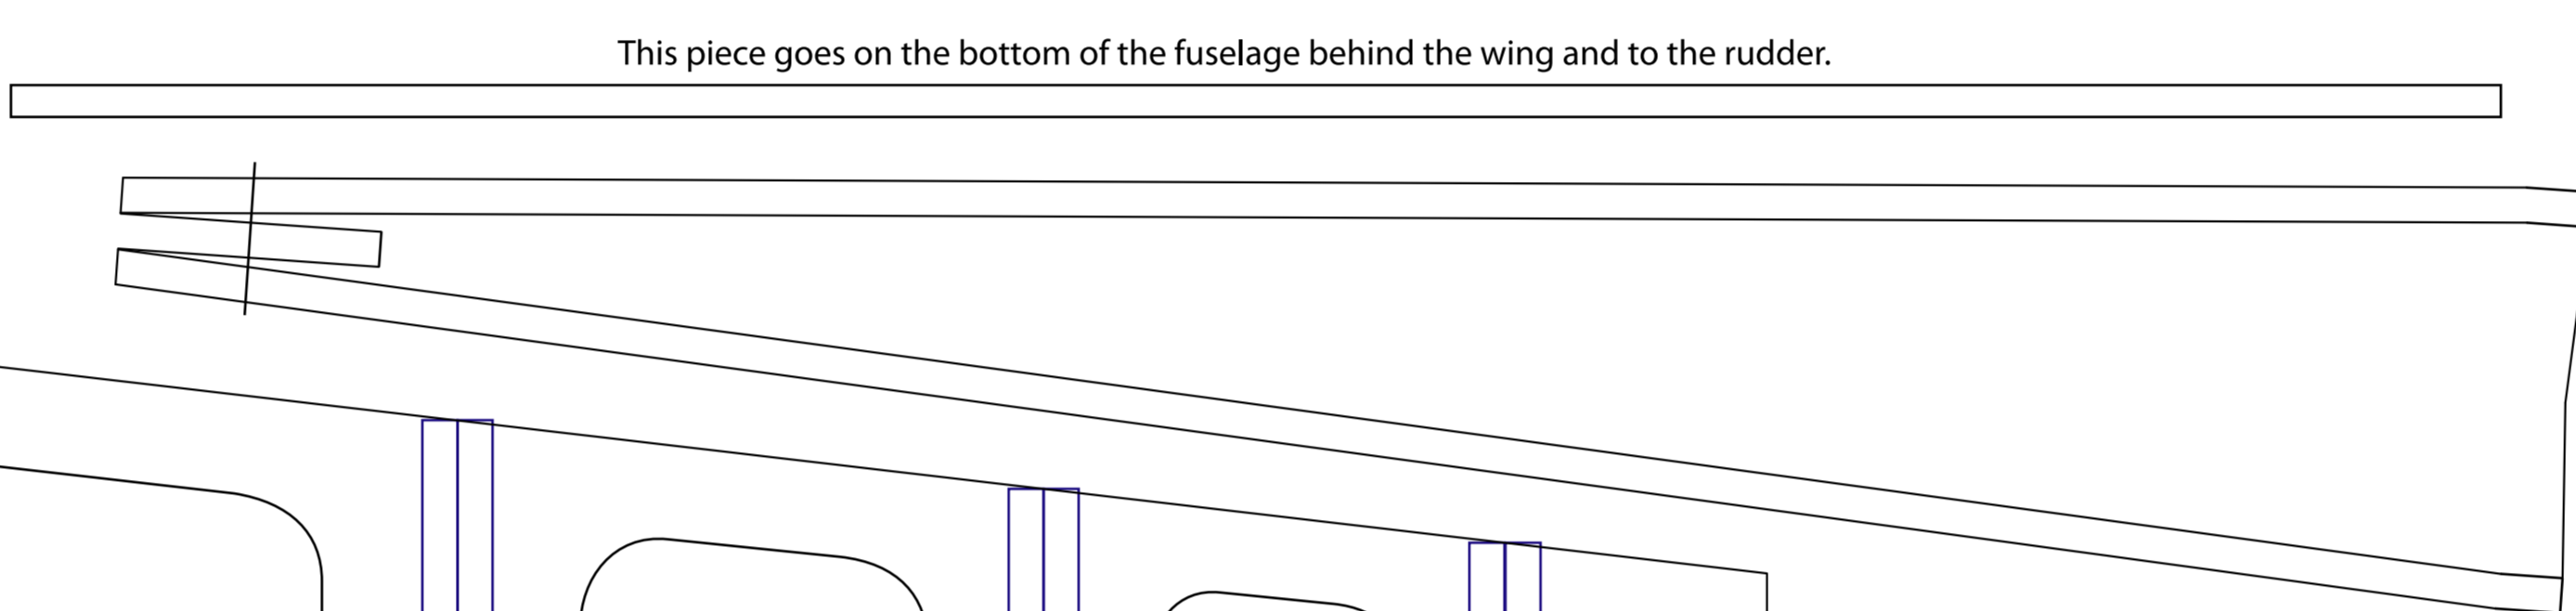

The Power Pod is the new Flite Test FT Corsiar Power Pack

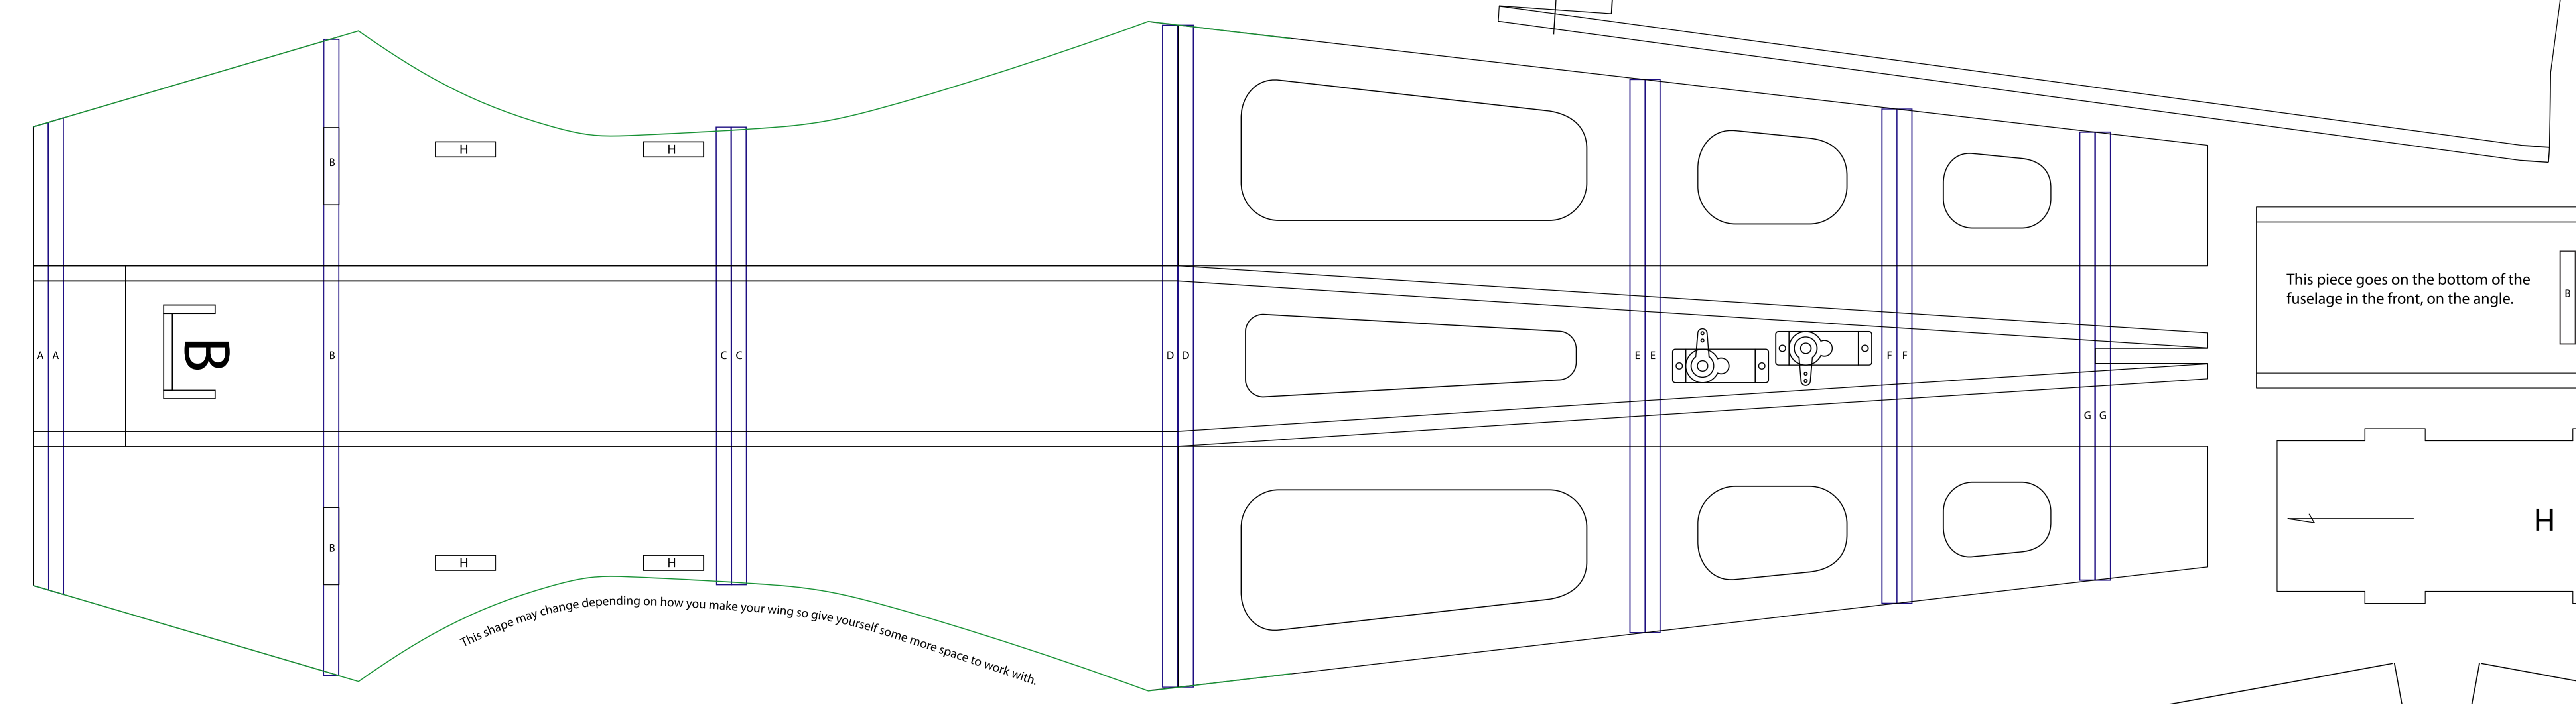

You might want to cut the length of the fuselage covering pieces a little "longer" for any adjustments that might be needed.